

Franklin[®]

CET-180

Quick Start Guide
www.franklin.com

CET-180



Key Guide



Scrolls through the word and phrase lists, selects fields in Home Time mode.
 ◀ cycles through the lookup languages. ▶ cycles through the target languages.

ENTER

Confirms an action, selects letters and shows translation of phrases.

ESC

Clears entries, cancels an operation, or goes up one level in category selection. Activated DST.

MODE/ON

Turns the unit on. Cycles through the available operational modes.

RS

(Rotary Switch) Scrolls through letters, word and phrase lists, categories and fields. When pushed, confirms a selection.

TALK

Speaks a phrase in the displayed language.

Icons

A	A.M.
P	P.M.
D	Daylight Savings Time on
⌚	Home Time
⌚	World Time
#	Home City
(••)	Alarm on
WORD	Translator mode
PHR	Phrase mode; cross-reference available
🔊	Speech data available
🎵	Key tone on
🔋	Low battery indicator
↓ ↑	Direction to scroll

Getting Started

1. Remove the battery insulation tab at the back of the unit.
2. Press **MODE/ON** to turn the unit on.
3. Use a thin pointed object to press the Reset button located inside the battery compartment. The message "Reset? Yes/No" appears.
4. Rotate the **RS** to see "Yes" and press **ENTER** to select it. Home Time is displayed.

Note: Reset the unit each time you change the batteries. Select "No" to reset your unit without losing data. If you get a "Memory Error" message, then reset the unit again and select "Yes." When you select "Yes" any entered data will be lost.

Setting Date and Time

1. Press **MODE/ON** to turn the unit on.
2. Continue pressing **MODE/ON** or rotate the **RS** until the time and date are displayed.
3. Press **</>** to scroll through the list of available cities.
4. When the city you want is displayed, press **ENTER** to select it as your Home City.
5. Press and hold **ESC** for two seconds until the year field blinks.
6. Rotate the **RS** to change the year.
7. Use **</>** to move to the month, day, hour and minute fields.
8. Rotate the **RS** to change the number in each field.
9. Press **ENTER** to confirm the date and time changes.
To exit without saving your changes, press **MODE/ON**.

Changing the Settings

1. Press **MODE/ON** to turn the unit on.
2. Continue pressing **MODE/ON** or rotate the **RS** until the Setup screen is displayed.
3. Press **ENTER**.
4. Press **</>** to cycle between *Language*, *Contrast*, and *Volume* and press **ENTER** to select the one you want.
Language enables you to select *English*, *Français*, *Deutsche*, *Italiano* or *Español* as the message language. The message language is the language of the menu prompts and screen messages. This becomes your default lookup language until you change it.
Note: All translations are made *from* a lookup language to a target language. You can set both at the "WORD" or "PHRASE" screens.
Contrast enables you to set how light or dark the screen is.
Volume enables you to select low or high as the volume of the spoken phrases.
5. Press **</>** or rotate the **RS** to scroll to the setting you want.
6. Press **ENTER** to confirm the settings.

Note: There is no OFF key. The unit turns itself off when there is no activity for approximately three minutes.

Using the Translator

1. Press **MODE/ON** to turn the unit on.
2. Continue pressing **MODE/ON** until "WORD" or "PHRASE" is displayed.
3. Press **</>** to cycle through the lookup/target languages. Stop when you see the ones you want.
4. To start searching for a word or a phrase in the lookup language, press **ENTER** or the **RS**.
The letter **A** is displayed for words and the first category is displayed for phrases.
5. Rotate the **RS** to scroll through the letters or categories and press **ENTER** or the **RS** to select the one you want.
6. Repeat the above step for a second letter.
The first word starting with the letters you entered is displayed.
7. Repeat Step 5 for a sub-category of phrases.
8. Rotate the **RS** to scroll through the list of matching words or list of phrases.
9. Press **ENTER** to see the translation of a phrase in the target language.
The translation of a word appears on the same screen as the word. **PHR** indicates the word on the screen is included in one or more phrases.
Press **ENTER** to see the phrase in the lookup language. Press **ENTER** again to see the translation in the target language. **ℓ** indicates speech data is available.
Press **TALK** to hear the phrase.

To save the word or phrase on the screen to user memory, press and hold **ESC** for about 3 seconds. To view the words in user memory, press **MODE/ON** until you see "WORD" or "PHRASE", and press **ENTER**. Rotate the **RS** until you see "User Memory" and press **ENTER**. Then rotate the **RS** to see your list of words or phrases. To delete a saved word or phrase, press and hold **ESC** for about 3 seconds when it is on the screen.

Replacing the Batteries

This unit uses two AAA batteries. Replace the batteries when the low battery indicator lights up. Batteries must be replaced within one minute or all user-entered data will be lost.

When the batteries are low, the talking function is disabled, and the following message is displayed: BATTERY LOW!

Use only fresh batteries as specified in these instructions. Do not mix new and old batteries as the old ones may leak.

WARNING: Make sure the unit is off before replacing the batteries. Replacing batteries when the unit is on may cause permanent damage.

1. Make sure the unit is off and turn it over.
2. Slide the cover off in the direction of the arrow.
3. Remove the old batteries and install two AAA batteries following the markings in the compartment.
4. Slide the cover back on.

Warning! This device stores your information as long as the batteries supply power. If the batteries lose power or are removed, all your information will be lost. Always keep written copies of your important information in case it is corrupted or lost.

Specifications

- **Model:** CET-180
 - **Size:** 88 X 58 X 19.8 mm • **Weight:** 85 g
 - **Battery:** 2 x AAA
- ISBN: 1-59074-208-7

Cleaning this Product

To clean this product, spray a mild glass cleaner onto a cloth and wipe its surface. Don't spray liquids directly onto the unit. Don't use or store your organizer in extreme or prolonged heat, cold, humidity, or other adverse conditions.

FOR HOME OR OFFICE USE

FCC Tested to comply with FCC Standards

Copyrights and Trademarks

© 2003 Franklin Electronic Publishers, Inc., Burlington, N.J. 08016-4907 USA. All rights reserved.



CAUTIONS

- Do not immerse the unit in water.
- Do not clean the unit with abrasive or corrosive materials.
- Do not subject the unit to excessive force, shock, dust, temperature or humidity.
- Do not tamper with the unit's internal components. Doing so will invalidate the warranty on the unit and may cause unnecessary damage.

This unit may change operating modes due to Electro-static Discharge. Normal operation of this unit can be re-established by pressing the reset key, **MODE/ON** or by removing/replacing batteries.

License Agreement

READ THIS LICENSE AGREEMENT BEFORE USING THE ELECTRONIC REFERENCE. YOUR USE OF THE ELECTRONIC REFERENCE DEEMS THAT YOU ACCEPT THE TERMS OF THIS LICENSE. IF YOU DO NOT AGREE WITH THESE TERMS, YOU MAY RETURN THIS PACKAGE WITH PURCHASE RECEIPT TO THE DEALER FROM WHICH YOU PURCHASED THE ELECTRONIC REFERENCE AND YOUR PURCHASE PRICE WILL BE REFUNDED. ELECTRONIC REFERENCE means the software product and documentation found in this package and FRANKLIN means Franklin Electronic Publishers, Inc.

Limited Use License

All rights in the ELECTRONIC REFERENCE remain the property of FRANKLIN. Through your purchase, FRANKLIN grants you a personal and nonexclusive licensed to use this ELECTRONIC REFERENCE. You may not make any copies of the ELECTRONIC REFERENCE or of the data stored therein, whether in electronic or print format. Such copying would be in violation of applicable copyright laws. Further, you may not modify, adapt, disassemble, decompile, translate, create derivative works of, or in any way reverse engineer the ELECTRONIC REFERENCE. You may not export or reexport, directly or indirectly, the ELECTRONIC REFERENCE without compliance with appropriate governmental regulations. The ELECTRONIC REFERENCE contains Franklin's confidential and proprietary information which you agree to take adequate steps to protect from unauthorized disclosure or use. This license is effective until terminated. This license terminates immediately without notice from FRANKLIN if you fail to comply with any provision of this license.

Limited Warranty (U.S. only)

LIMITED WARRANTY, DISCLAIMER OF WARRANTIES AND LIMITED REMEDY

(A) LIMITED WARRANTY. FRANKLIN WARRANTS TO THE ORIGINAL END USER THAT FOR A PERIOD OF ONE (1) YEAR FROM THE ORIGINAL DATE OF PURCHASE AS EVIDENCED BY A COPY OF YOUR RECEIPT, YOUR FRANKLIN PRODUCT SHALL BE FREE FROM DEFECTS IN MATERIALS AND WORKMANSHIP. THIS LIMITED WARRANTY DOES NOT INCLUDE DAMAGE DUE TO ACTS OF GOD, ACCIDENT, MISUSE, ABUSE, NEGLIGENCE, MODIFICATION, UNSUITABLE ENVIRONMENT OR IMPROPER MAINTENANCE. THE SOLE OBLIGATION AND LIABILITY OF FRANKLIN, AND YOUR EXCLUSIVE REMEDY UNDER THIS LIMITED WARRANTY, WILL BE REPAIR OR REPLACEMENT WITH THE SAME OR AN EQUIVALENT PRODUCT OF THE DEFECTIVE PORTION OF THE PRODUCT, AT THE SOLE OPTION OF FRANKLIN IF IT DETERMINES THAT THE PRODUCT WAS DEFECTIVE AND THE DEFECTS AROSE WITHIN THE DURATION OF THE LIMITED WARRANTY. THIS REMEDY IS YOUR EXCLUSIVE REMEDY FOR BREACH OF THIS WARRANTY. THIS WARRANTY GIVES YOU CERTAIN RIGHTS; YOU MAY ALSO HAVE OTHER LEGISLATED RIGHTS THAT MAY VARY FROM JURISDICTION TO JURISDICTION.

(B) DISCLAIMER OF WARRANTIES AND LIMITATION OF LIABILITY. EXCEPT FOR THE LIMITED WARRANTIES EXPRESSLY RECITED ABOVE, THIS FRANKLIN IS PROVIDED ON AN "AS IS" BASIS, WITHOUT ANY OTHER WARRANTIES OR CONDITIONS, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, WARRANTIES OF MERCHANTABILITY, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OR THOSE ARISING BY LAW, STATUTE, USAGE OF TRADE, OR COURSE OF DEALING. THIS WARRANTY APPLIES ONLY TO PRODUCTS MANUFACTURED BY FRANKLIN AND DOES NOT INCLUDE BATTERIES, CORROSION OF BATTERY

CONTACTS OR ANY OTHER DAMAGE CAUSED BY BATTERIES. NEITHER FRANKLIN NOR OUR DEALERS OR SUPPLIERS SHALL HAVE ANY LIABILITY TO YOU OR ANY OTHER PERSON OR ENTITY FOR ANY INDIRECT, INCIDENTAL, SPECIAL, OR CONSEQUENTIAL DAMAGES WHATSOEVER, INCLUDING, BUT NOT LIMITED TO, LOSS OF REVENUE OR PROFIT, LOST OR DAMAGED DATA OR OTHER COMMERCIAL OR ECONOMIC LOSS, EVEN IF WE HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, OR THEY ARE OTHERWISE FORESEEABLE. WE ARE ALSO NOT RESPONSIBLE FOR CLAIMS BY A THIRD PARTY. OUR MAXIMUM AGGREGATE LIABILITY TO YOU, AND THAT OF OUR DEALERS AND SUPPLIERS, SHALL NOT EXCEED THE AMOUNT PAID BY YOU FOR THE FRANKLIN PRODUCT AS EVIDENCED BY YOUR PURCHASE RECEIPT. YOU ACKNOWLEDGE THAT THIS IS A REASONABLE ALLOCATION OF RISK. SOME STATES/COUNTRIES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF LIABILITY FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. IF THE LAWS OF THE RELEVANT JURISDICTION DO NOT PERMIT FULL WAIVER OF IMPLIED WARRANTIES, THEN THE DURATION OF IMPLIED WARRANTIES AND CONDITIONS ARE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY GRANTED HEREIN.

(C) WARRANTY SERVICE: UPON DISCOVERING A DEFECT, YOU MUST CALL FRANKLIN'S CUSTOMER SERVICE DESK, 1-800-266-5626, TO REQUEST A RETURN MERCHANDISE AUTHORIZATION ("RMA") NUMBER, BEFORE RETURNING THE PRODUCT (TRANSPORTATION CHARGES PREPAID) TO:

FRANKLIN ELECTRONIC PUBLISHERS, INC.
ATTN: SERVICE DEPARTMENT
ONE FRANKLIN PLAZA
BURLINGTON, NJ 08016-4907
IF YOU RETURN A FRANKLIN PRODUCT, PLEASE INCLUDE A NOTE WITH THE RMA, YOUR NAME,

ADDRESS, TELEPHONE NUMBER, A BRIEF DESCRIPTION OF THE DEFECT AND A COPY OF YOUR SALES RECEIPT AS PROOF OF YOUR ORIGINAL DATE OF PURCHASE. YOU MUST ALSO WRITE THE RMA PROMINENTLY ON THE PACKAGE IF YOU RETURN THE PRODUCT, OTHERWISE THERE MAY BE A LENGTHY DELAY IN THE PROCESSING OF YOUR RETURN. WE STRONGLY RECOMMEND USING A TRACKABLE FORM OF DELIVERY TO FRANKLIN FOR YOUR RETURN.

Limited Warranty (EU and Switzerland)

This product, excluding batteries and liquid crystal display (LCD), is guaranteed by Franklin for a period of two years from the date of purchase. It will be repaired or replaced with an equivalent product (at Franklin's option) free of charge for any defect due to faulty workmanship or materials.

Products purchased outside the European Union and Switzerland that are returned under warranty should be returned to the original vendor with proof of purchase and description of fault. Charges will be made for all repairs unless valid proof of purchase is provided.

This warranty explicitly excludes defects due to misuse, accidental damage, or wear and tear. This guarantee does not affect the consumer's statutory rights.

Limited Warranty (outside U.S., EU and Switzerland)

This product, excluding batteries and liquid crystal display (LCD), is guaranteed by Franklin for a period of one year from the date of purchase. It will be repaired or replaced with an equivalent product (at Franklin's option) free of charge for any defect due to faulty workmanship or materials.

Products purchased outside the United States, the European Union and Switzerland that are returned under warranty should be returned to the original vendor with proof of purchase and description of fault. Charges will be made for all repairs unless valid proof of purchase is provided.

This warranty explicitly excludes defects due to misuse, accidental damage, or wear and tear. This guarantee does not affect the consumer's statutory rights.

FCC Notice

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: This unit was tested with shielded cables on the peripheral devices. Shielded cables must be used with the unit to insure compliance.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.