

Franklin®

*Spanish-
English
Translator*
CST-180

User's Guide

www.franklin.com

License Agreement

READ THIS LICENSE AGREEMENT BEFORE USING THE ELECTRONIC REFERENCE. YOUR USE OF THE ELECTRONIC REFERENCE DEEMS THAT YOU ACCEPT THE TERMS OF THIS LICENSE. IF YOU DO NOT AGREE WITH THESE TERMS, YOU MAY RETURN THIS PACKAGE WITH PURCHASE RECEIPT TO THE DEALER FROM WHICH YOU PURCHASED THE ELECTRONIC REFERENCE AND YOUR PURCHASE PRICE WILL BE REFUNDED. ELECTRONIC REFERENCE means the software product and documentation found in this package and FRANKLIN means Franklin Electronic Publishers, Inc.

Limited Use License

All rights in the ELECTRONIC REFERENCE remain the property of FRANKLIN. Through your purchase, FRANKLIN grants

you a personal and nonexclusive license to use this ELECTRONIC REFERENCE. You may not make any copies of the ELECTRONIC REFERENCE or of the data stored therein, whether in electronic or print format. Such copying would be in violation of applicable copyright laws. Further, you may not modify, adapt, disassemble, decompile, translate, create derivative works of, or in any way reverse engineer the ELECTRONIC REFERENCE. You may not export or reexport, directly or indirectly, the ELECTRONIC REFERENCE without compliance with appropriate governmental regulations. The ELECTRONIC REFERENCE contains Franklin's confidential and proprietary information which you agree to take adequate steps to protect from unauthorized disclosure or use. This license is effective until terminated. This license terminates immediately without notice from FRANKLIN if you fail to comply with any provision of this license.

Getting Started

1. Remove the battery insulation tape at the back of the unit.
2. Press **MODE/ON** to turn the unit on. Home Time is displayed.

Replacing the Batteries

This unit uses two AAA batteries.

Replace the batteries when the low battery indicator lights up. Batteries must be replaced within one minute or all user-entered data will be lost.

When the batteries are low, the talking function is disabled, and the following message is displayed: **BATTERY LOW!**

WARNING: Make sure the unit is off before replacing the batteries. Replacing batteries when the unit is on may cause permanent damage.

1. Make sure the unit is off and turn it over.

2. Slide the cover off in the direction of the arrow.
3. Remove the old batteries and install two AAA batteries following the markings in the compartment.
4. Slide the cover back on.

Key Guide

◀ / ▶	Scrolls through the word and phrase lists, selects fields in Home Time mode, toggles between English and Spanish lookup languages.
ENTER	Confirms an action, selects letters and shows translation of phrases.
ESC	Clears entries, cancels an operation, or goes up one level in category selection.
MODE/ON	Turns the unit on. Cycles between the available operational modes.

RS (Rotary Switch)	Scrolls through letters, word and phrase lists, categories and fields. When pushed, confirms a selection.
TALK	Speaks a phrase in the displayed language.

Icons

A	A.M.
P	P.M.
D	Daylight Savings Time on
	Home Time
	World Time
#	Home City
(••)	Alarm on
	Translator mode
	Phrase mode; cross-reference available
	Speech data available
	Key tone on
	Low battery indicator

Changing the Settings

From the Setup menu, you can select the message language, which is the language of the messages and prompts. You can also adjust the screen contrast and the volume of the spoken phrases.

1. Press **MODE/ON** to turn the unit on.
2. Continue pressing **MODE/ON** or rotate the **RS** until the Setup screen is displayed.
3. Press **ENTER**.
4. Press \triangleleft or \triangleright to cycle between *Language*, *Contrast*, and *Volume* and press **ENTER** to select the one you want.

Language enables you to select English or Español as the message language. *Contrast* enables you to set how light or dark the screen is. *Volume* enables you to select *low* or *high* as the volume of the spoken phrases.

5. Press \triangleleft or \triangleright or rotate the **RS** to scroll to the setting you want.
6. Press **ENTER** to confirm the settings.

Home Time / World Time

To set or change Home and World times and dates, the time and date screen must first be displayed.

1. Press **MODE/ON** to turn on the unit.
2. Continue pressing **MODE/ON** (or rotate the **RS**) until the time and date are displayed.

Setting the Home City

The current Home City is displayed with a # next to it.

1. Press \triangleleft or \triangleright to scroll through the list of cities.

2. When the city you want is displayed, press **ENTER** to set it as the Home City.
⌚ appears on the screen indicating Home time.

Setting the Home Date and Time

1. In the Time/Date screen, press and hold **ESC** for about 2 seconds, until the year field blinks.
2. Rotate the **RS** to change the year.
3. Use **◀** or **▶** to move to the month, day, hour and minute fields.
4. Rotate the **RS** to change the number in each field.
5. Press **ENTER** to confirm the date and time changes.

To cancel any changes, press **MODE/ON** before pressing **ENTER**.

✓ Changing to 24-hour format

When setting the time as indicated above, you can change to the 24-hour format when the hour field is blinking. Continue to rotate the **RS** until the “A” or “P” disappears from the screen. The 24-hour format is indicated by a blank space following the seconds indicator. To scroll through the numbers quickly, just hold the **RS** up or down. To return to the 12-hour format, make sure the hour field is blinking and rotate the **RS** until an “A” or “P” is displayed following the seconds indicator (for a.m. and p.m.).

✓ Activating Daylight Savings Time (DST)

When the Home time and date are displayed, press **ESC** to toggle DST on or off. This enables or disables DST for home time only. **D** next to the time

indicates DST is activated. To activate DST for a world city, use ◀ or ▶ to display the time for another city. Then press **ESC** to toggle DST on or off. This enables or disables DST for that world city only.

✓ **Viewing World City Time**

Use ◀ or ▶ to view the date and time in the list of available cities. 🌐 appears on the screen to indicate World time.

CITY	ABBREVIATION
LONDON	LON
PARIS	PAR
BERLIN	BER
ROME	ROM
HELSINKI	HEL
CAIRO	CAI
MOSCOW	MOW
RIYADH	RUH
TEHRAN	THR
DUBAI	DXB
KABUL	KBL
KARACHI	KHI
DELHI	DEL
DHAKA	DAC
YANGON	RGN
BANGKOK	BKK
HONG KONG	HKG
SINGAPORE	SIN
TOKYO	TYO
ADELAIDE	ADL
SYDNEY	SYD
NOUMEA	NOU
WELLINGTON	WLG
HONOLULU	HNL
ANCHORAGE	ANC
LOS ANGELES	LAX
DENVER	DEN
CHICAGO	CHI
NEW YORK	NYC
TORONTO	YYZ
CARACAS	CCS
RIO DE JANEIRO	RIO

Alarm

To set or change the alarm, the alarm screen must first be displayed.

1. Press **MODE/ON** to turn on the unit.
2. Continue pressing **MODE/ON** (or rotate the **RS**) until the alarm screen is displayed.

Setting the Daily Alarm

1. Press and hold **ESC** for about 2 seconds, until the hour field blinks.
2. Use **◀** or **▶** to move between the hour and minute fields.
3. Rotate the **RS** to change the hour and minutes.
4. Press **ENTER** to set the alarm time.
To cancel any changes, press **MODE/ON** before pressing **ENTER**.
5. When the alarm sounds, press any key to stop it.
The alarm automatically stops after 30 seconds.

Press the **RS** to activate the snooze function. The alarm will sound again in 10 minutes, and will do this for a maximum of three times.

✓ **Turning the alarm on or off**

When the alarm screen is displayed, press **ENTER** to turn the alarm on or off.

✓ **Changing the alarm sound**

The daily alarm has three different alarm sounds. When the alarm screen is displayed, press **ENTER** to turn the alarm on. Press **<** or **>** to select the sound you want. For a demonstration of the selected sound, press **RS**.

Press **RS** again to turn the sound off.

✓ **Automatic Shutoff**

Please note that there is no **OFF** key. The unit turns itself off when no key is pressed for approximately three minutes. Press **MODE/ON** to resume.

Using the Word Translator

Searching for a Word

1. Press **MODE/ON** to turn the unit on.
2. Continue pressing **MODE/ON** (or rotate the **RS**) until “WORD” and “ENG-->SPA” are displayed.

When Spanish is the message language, “PALABRA” and “ENG<--SPA” are displayed.

3. Use ◀ or ▶ to toggle between languages.

Changing the lookup language will change the prompts for your current search, but will not affect the message language.

4. Press **ENTER** or press the **RS** to start searching for a word in the selected language.

The letter “A” is displayed.

5. Rotate the **RS** to scroll through the alphabet for the first letter of the word.
6. Press **ENTER** or press the **RS** to select the first letter.
7. Rotate the **RS** to scroll through the alphabet for the second letter of the word.
8. Press **ENTER** or press the **RS** to select the second letter.

The first word matching the two entered letters is displayed with its translation.

9. Rotate the **RS** to scroll through the list of matching words.

If a word is too long to fit on the screen, a right arrow is displayed. Press **▷** to display the rest of the word, and **◁** to display the beginning of the word.

10. Press **ESC** to begin a new search.

Finding a Corresponding Phrase

When a word is included in one or more phrases, the symbol  is displayed at the bottom of the screen.

1. Press **ENTER** to display the phrase in the lookup language.
2. Press **ENTER** again to display the translation.

To hear the phrase spoken, press **TALK**. The language displayed is the language spoken.  appears on the screen to indicate that phrase can be heard.

Note: You can use standard headphones to listen privately. Just plug them into the headphone jack located at the bottom of the unit.

Press **ENTER** again to return to the lookup language.

3. Rotate the **RS** to see the next phrase containing that word.

4. Press **ESC** to return to the word list.
Press **MODE/ON** to go directly to the Phrase language selection screen.

Using the Phrase Translator

Searching for a Phrase

1. Press **MODE/ON** to turn the unit on.
2. Continue pressing **MODE/ON** (or rotate the **RS**) until "PHRASE" and "ENG-->SPA" are displayed.

When Spanish is the message language, "FRASE" and "ENG<--SPA" are displayed.

3. Use ◀ or ▶ to toggle between languages.

Changing the lookup language will change the prompts for your current search, but will not affect the message language.

4. Press **ENTER** or press the **RS** to start searching for a phrase in the lookup language.

The first category is displayed.

5. Rotate the **RS** to scroll through the categories.
6. Press **ENTER** or press the **RS** to select the category you want.

You see either a list of sub-categories or the first phrase for that category. Rotate the **RS** to scroll through the list of sub-categories and press **ENTER** when you see the one you want.

7. Rotate the **RS** to scroll through the list of phrases.

If a phrase is too long to fit on the screen, an up or down arrow is displayed. Press **▷** to display the rest of the phrase, and **◁** to display the beginning of the phrase.

8. Press **ENTER** to see the translation of the phrase.

To hear the phrase spoken, press **TALK**. The language displayed is the language spoken.

9. Press **ESC** to return to the previous phrase menu.

Press **MODE/ON** to go directly to the Phrase language selection screen.

Selecting Optional Words

Some phrases have optional words that can be selected. These words are displayed in brackets.

1. When an optional word is displayed in brackets, press the **RS**.
The word starts blinking.
2. Rotate the **RS** to select a different optional word.
3. Press **ENTER** or press the **RS** to confirm the selection.
4. Press **ENTER** to translate the phrase or press **TALK** to hear the phrase spoken.

Using the User Memory

You may want to use some words and phrases over and over again. These can be saved in user memory in order to access them quickly.

Saving a Word or Phrase

1. Find the word or phrase you want to save.

See “Using the Word Translator” or “Using the Phrase Translator” for details.

2. Press and hold **ESC** for about 3 seconds.

The message “Added to Memory” appears briefly, before re-displaying the phrase.

Finding a Word or Phrase

1. Press **MODE/ON** to turn the unit on.

2. Continue pressing **MODE/ON** (or rotate the **RS**) until "WORD" or "PHRASE" and "ENG-->SPA" are displayed.

If Spanish is the message language, "PALABRA" or "FRASE" and "ENG<--SPA" are displayed.

3. Press **ENTER**.
4. Rotate the **RS** up until you see "User Memory".
5. Press **ENTER**.
6. Rotate the **RS** to scroll through the list of words or phrases.

If you are referencing a phrase, press **ENTER** to translate the phrase or press **TALK** to hear the phrase spoken.

Deleting a Word or Phrase


1. Scroll through your user memory to find the word or phrase you want to delete.
2. Press and hold **ESC** for about three seconds.
"Delete?" appears on the screen.
3. Press **ENTER** to confirm the deletion, or **ESC** to cancel the deletion.
4. Repeat this process for each word or phrase you want to delete.

Resetting the Unit

1. If you need to reset your unit, use a paper clip to gently press the reset button.

The reset button is located on the back of your unit, inside the battery compartment.

2. The following message appears:



3. Rotate the **RS** to toggle select "Yes" or "No" then press **ENTER** or press the **RS** to select it.

Select "Yes" to clear all memory.

Select "No" to preserve the memory. If "No" is selected and the message "Memory Error" appears, reset the unit again, and select "Yes".

Cautions

The following precautions are listed to help you maintain your unit for years of satisfactory usage.

- Do not immerse the unit in water.
- Do not clean the unit with abrasive or corrosive materials.

- Do not subject the unit to excessive force, shock, dust, temperature or humidity.
- Do not tamper with the unit's internal components. Doing so will invalidate the warranty on the unit and may cause unnecessary damage.
- Use only fresh batteries as specified in these instructions. Do not mix new and old batteries as the old ones may leak.
- Never let children play with the batteries. Swallowing a battery could be fatal. To avoid risk of explosion, do not recharge, open, or heat a battery or dispose of it in fire.
- Always read the user instructions thoroughly before operating the unit.

Specifications

User Memory:	20 entries
Display:	16 characters x 2 lines
Batteries:	2 x AAA
Automatic Shutoff:	3 minutes
Temperature:	0 - 40C (32F - 104F) for operation -20 - 60C (-4 - 140F) for storage
Dimensions:	88 x 58 x 19.8mm
Weight:	85g (included batteries)

© 2003 Franklin Electronic Publishers,
Inc.

Burlington, N.J. 08016-4907 U.S.A. All
rights reserved.

ISBN# 1-59074-206-0



This unit may change operating modes due to Electro-static Discharge. Normal operation of this unit can be re-established by pressing the reset key, **MODE/ON** or by removing/replacing batteries.

FCC Notice

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in

accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: This unit was tested with shielded cables on the peripheral devices.

Shielded cables must be used with the unit to insure compliance.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

Limited Warranty (U.S. only)

LIMITED WARRANTY, DISCLAIMER OF WARRANTIES AND LIMITED REMEDY

(A) LIMITED WARRANTY. FRANKLIN WARRANTS TO THE ORIGINAL END USER THAT FOR A PERIOD OF ONE (1) YEAR FROM THE ORIGINAL DATE OF PURCHASE AS EVIDENCED BY A COPY OF YOUR RECEIPT, YOUR FRANKLIN PRODUCT SHALL BE FREE FROM DEFECTS IN MATERIALS AND WORKMANSHIP. THIS LIMITED WARRANTY DOES NOT INCLUDE DAMAGE DUE TO ACTS OF GOD, ACCIDENT, MIS-

USE, ABUSE, NEGLIGENCE, MODIFICATION, UNSUITABLE ENVIRONMENT OR IMPROPER MAINTENANCE. THE SOLE OBLIGATION AND LIABILITY OF FRANKLIN, AND YOUR EXCLUSIVE REMEDY UNDER THIS LIMITED WARRANTY, WILL BE REPAIR OR REPLACEMENT WITH THE SAME OR AN EQUIVALENT PRODUCT OF THE DEFECTIVE PORTION OF THE PRODUCT, AT THE SOLE OPTION OF FRANKLIN IF IT DETERMINES THAT THE PRODUCT WAS DEFECTIVE AND THE DEFECTS AROSE WITHIN THE DURATION OF THE LIMITED WARRANTY. THIS REMEDY IS YOUR EXCLUSIVE REMEDY FOR BREACH OF THIS WARRANTY. THIS WARRANTY GIVES YOU CERTAIN RIGHTS; YOU MAY ALSO HAVE OTHER LEGISLATED RIGHTS THAT MAY VARY FROM JURISDICTION TO JURISDICTION.

(B) DISCLAIMER OF WARRANTIES AND LIMITATION OF LIABILITY. EXCEPT FOR THE LIMITED WARRANTIES EXPRESSLY RECITED ABOVE, THIS FRANKLIN IS PRO-

VIDED ON AN "AS IS" BASIS, WITHOUT ANY OTHER WARRANTIES OR CONDITIONS, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, WARRANTIES OF MERCHANTABILITY QUALITY, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OR THOSE ARISING BY LAW, STATUTE, USAGE OF TRADE, OR COURSE OF DEALING. THIS WARRANTY APPLIES ONLY TO PRODUCTS MANUFACTURED BY FRANKLIN AND DOES NOT INCLUDE BATTERIES, CORROSION OF BATTERY CONTACTS OR ANY OTHER DAMAGE CAUSED BY BATTERIES. NEITHER FRANKLIN NOR OUR DEALERS OR SUPPLIERS SHALL HAVE ANY LIABILITY TO YOU OR ANY OTHER PERSON OR ENTITY FOR ANY INDIRECT, INCIDENTAL, SPECIAL, OR CONSEQUENTIAL DAMAGES WHATSOEVER, INCLUDING, BUT NOT LIMITED TO, LOSS OF REVENUE OR PROFIT, LOST OR DAMAGED DATA OR OTHER COMMERCIAL OR ECONOMIC LOSS, EVEN IF WE HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH

DAMAGES, OR THEY ARE OTHERWISE FORESEEABLE. WE ARE ALSO NOT RESPONSIBLE FOR CLAIMS BY A THIRD PARTY. OUR MAXIMUM AGGREGATE LIABILITY TO YOU, AND THAT OF OUR DEALERS AND SUPPLIERS, SHALL NOT EXCEED THE AMOUNT PAID BY YOU FOR THE FRANKLIN PRODUCT AS EVIDENCED BY YOUR PURCHASE RECEIPT. YOU ACKNOWLEDGE THAT THIS IS A REASONABLE ALLOCATION OF RISK. SOME STATES/COUNTRIES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF LIABILITY FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. IF THE LAWS OF THE RELEVANT JURISDICTION DO NOT PERMIT FULL WAIVER OF IMPLIED WARRANTIES, THEN THE DURATION OF IMPLIED WARRANTIES AND CONDITIONS ARE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY GRANTED HEREIN.

(C) WARRANTY SERVICE: UPON DISCOVERING A DEFECT, YOU MUST CALL

FRANKLIN'S CUSTOMER SERVICE DESK,
1-800-266-5626, TO REQUEST A RETURN
MERCHANDISE AUTHORIZATION ("RMA")
NUMBER, BEFORE RETURNING THE
PRODUCT (TRANSPORTATION CHARGES
PREPAID) TO:

FRANKLIN ELECTRONIC PUBLISHERS, INC.
ATTN: SERVICE DEPARTMENT
ONE FRANKLIN PLAZA
BURLINGTON, NJ 08016-4907

IF YOU RETURN A FRANKLIN PRODUCT,
PLEASE INCLUDE A NOTE WITH THE RMA,
YOUR NAME, ADDRESS, TELEPHONE
NUMBER, A BRIEF DESCRIPTION OF THE
DEFECT AND A COPY OF YOUR SALES
RECEIPT AS PROOF OF YOUR ORIGINAL
DATE OF PURCHASE. YOU MUST ALSO
WRITE THE RMA PROMINENTLY ON THE
PACKAGE IF YOU RETURN THE PRODUCT,
OTHERWISE THERE MAY BE A LENGTHY
DELAY IN THE PROCESSING OF YOUR
RETURN. WE STRONGLY RECOMMEND
USING A TRACKABLE FORM OF DELIVERY
TO FRANKLIN FOR YOUR RETURN.

Limited Warranty (EU and Switzerland)

This product, excluding batteries and liquid crystal display (LCD), is guaranteed by Franklin for a period of two years from the date of purchase. It will be repaired or replaced with an equivalent product (at Franklin's option) free of charge for any defect due to faulty workmanship or materials.

Products purchased outside the European Union and Switzerland that are returned under warranty should be returned to the original vendor with proof of purchase and description of fault. Charges will be made for all repairs unless valid proof of purchase is provided.

This warranty explicitly excludes defects due to misuse, accidental damage, or wear and tear. This guarantee does not affect the consumer's statutory rights.

Limited Warranty (outside U.S., EU and Switzerland)

This product, excluding batteries and liquid crystal display (LCD), is guaranteed by Franklin for a period of one year from the date of purchase. It will be repaired or replaced with an equivalent product (at Franklin's option) free of charge for any defect due to faulty workmanship or materials.

Products purchased outside the United States, the European Union and Switzerland that are returned under warranty should be returned to the original vendor with proof of purchase and description of fault. Charges will be made for all repairs unless valid proof of purchase is provided.

This warranty explicitly excludes defects due to misuse, accidental damage, or wear and tear. This guarantee does not affect the consumer's statutory rights.

IST-28001-00

Rev. C