

USER'S MANUAL (MD-6000)

Forward

Thank you for purchasing our product. For best results and to ensure that you are able to employ the features and functions of this product to their fullest, please read this user's manual carefully and keep it at hand for future reference.

Important

You are strongly recommended to keep a separate record of all important data on other media to protect against its loss. We assume no responsibilities for any damages or losses caused by deletion of data as a result of malfunction, repair or battery replacement. We also assume no responsibilities for any loss or claim by the third parties, which may arise through the use of this product.

Table of Contents

Chapter 1 Operation Instructions

- 1.1 Open & Close the Unit
- 1.2 About Power Supply
- 1.3 Keyboard Layout
- 1.4 Input Methods
- 1.5 Automatic Power-off
- 1.6 Category of Content
- 1.7 Cautions
- 1.8 Trouble-shooting
- 1.9 Specification of the Parameter

Chapter 2 Dictionary Functions

- 2.1 English-Chinese Dictionary
 - 2.1.1 General Search
 - 2.1.2 Spell-check & Nearest Word
 - 2.1.3 Wildcard Search
 - 2.1.4 Oxford Dictionary
 - 2.1.5 Cross-search
 - 2.1.6 Eng-Chi User's Dictionary
- 2.2 Chinese-English Dictionary
 - 2.2.1 General Search
 - 2.2.2 Nearest Word
 - 2.2.3 Wildcard Search
 - 2.2.4 Cross-search
 - 2.2.5 Chi-Eng User's Dictionary
- 2.3 Chinese-Chinese Dictionary
 - 2.3.1 General Search
 - 2.3.2 Cross-search
- 2.4 English-English Dictionary
 - 2.4.1 General Search
 - 2.4.2 Spell-check & Nearest Word
 - 2.4.3 Wildcard Search
 - 2.4.4 Cross-search
 - 2.4.5 Eng-Eng User's Dictionary
- 2.5 Network Dictionary
 - 2.5.1 General Search
 - 2.5.2 Spell-check & Nearest Word
 - 2.5.3 Wildcard Search
 - 2.5.4 Cross-search

- 2.6 Oxford Dictionary
 - 2.6.1 General Search
 - 2.6.2 Spell-check & Nearest Word
 - 2.6.3 Wildcard Search
 - 2.6.4 English-Chinese Dictionary
 - 2.6.5 Grammar Inquiry
 - 2.6.6 Cross-search
- 2.7 Conversation
- 2.8 Vocabulary
- 2.9 User's Dictionary
 - 2.9.1 Eng-Chi User's Dictionary
 - 2.9.2 Chi-Eng User's Dictionary
 - 2.9.3 Eng-Eng User's Dictionary
- 2.10 Revision Test
 - 2.10.1 Oxford Revision
 - 2.10.2 English-Chinese Revision
 - 2.10.3 Chinese-English Revision
 - 2.10.4 Oxford Test
 - 2.10.5 English-Chinese Test

Chapter 3 Organizer

- 3.1 Personal Information
 - 3.1.1 Inputting Data
 - 3.1.2 Editing and Deleting Data
- 3.2 Telephone Directory
 - 3.2.1 Inputting Data
 - 3.2.2 Searching Data
 - 3.2.3 Editing and Deleting Data
- 3.3 Memorandum
 - 3.3.1 Inputting Data
 - 3.3.2 Searching Data
 - 3.3.3 Editing and Deleting Data
- 3.4 Schedule
 - 3.4.1 Inputting Data
 - 3.4.2 Searching Data
 - 3.4.3 Editing and Deleting Data
- 3.5 To Do List
 - 3.5.1 Inputting Data
 - 3.5.2 Searching Data
 - 3.5.3 Editing and Deleting Data

- 3.6 Time
- 3.7 Calendar
- 3.8 Commemoration
 - 3.8.1 Inputting Data
 - 3.8.2 Searching Data
 - 3.8.3 Editing and Deleting Data
- 3.9 Scheduler
 - 3.9.1 Inputting Data
 - 3.9.2 Searching Data
 - 3.9.3 Editing Data
- 3.10 Schedule Class
 - 3.10.1 Inputting Data
 - 3.10.2 Searching Data
 - 3.10.3 Editing and Deleting Data

Chapter 4 Calculation

- 4.1 Simple Calculator
- 4.2 Scientific Calculator
- 4.3 Currency Conversion
- 4.4 Unit Conversion
- 4.5 Size Equivalent
- 4.6 Financial Management
- 4.7 Loan Interest
- 4.8 Mathematical Formula
- 4.9 Simple Loan-bidding
- 4.10 Complex Loan-bidding

Chapter 5 Others

- 5.1 Games
 - 5.1.1 Brick Game
 - 5.1.2 Apple Chess
 - 5.1.3 Snake
 - 5.1.4 Shooting
 - 5.1.5 Riddle
 - 5.1.6 5-Tile
 - 5.1.7 Hangman
 - 5.1.8 Puzzle
 - 5.1.9 Pipes
 - 5.1.10 Mine
- 5.2 Travel Guide

- 5.3 Telephone Information
- 5.4 English Name
- 5.5 Memory Check
- 5.6 PC SYNC
- 5.7 Data Deletion
- 5.8 System Setting
 - 5.8.1 Auto Power Off
 - 5.8.2 Display Format
 - 5.8.3 Alarm Setting
 - 5.8.4 Sound & Speech Setting
 - 5.8.5 Password Setting
 - 5.8.6 Game Lock
- 5.9 Display Setting
- 5.10 Brief of Function

Chapter 6 Appendix

- 6.1 Chart of Cangjie Input Method
- 6.2 Chart of Wang Ma 5-strokes Input Method
- 6.3 Contrastive Chart between Pinyin and Zhuyin
 - 6.3.1 Chart of Initial Consonant of a Chinese syllable
 - 6.3.2 Chart of Compound Vowel of a Chinese syllable
- 6.4 Chart of 5-strokes

Chapter 1 Operation Instructions

1.1 Open & Close the Unit

The cover of the unit is designed loose-leaf, it is convenient and easy to open or close the unit.

1.2 About Power Supply



This unit is powered by two 3A batteries. If the unit doesn't work properly, which indicates battery voltage is weak, please turn off the unit and replace the batteries with new ones.

Procedures of replacing batteries:

1. Turn off the unit.
2. Push the battery compartment lock which is on the back of the unit to the position of “Unlock”, open the battery compartment door and replace the used batteries with new ones.
3. Cover the battery compartment door and push the lock to the position of “Lock”, otherwise, the unit can not be switched on.



Note: Please use alkaline batteries.

Cautions:


1. Follow the right procedures and make sure that the polarities of the batteries are correct.
2. Never leave used batteries in the battery compartment.
3.  indicates the battery voltage is enough,  indicates the battery voltage is weak, in this case, please replace the batteries with new ones following the information on screen.

Note: When the adapter is in use, there will be no flag indicating the battery voltage.

Using AC adapter:

1. Press  to turn off the unit before plugging the AC adapter.
2. After using, press  to turn off the unit before unplugging the AC adapter. If the unit hangs because of improper use, simply take out the batteries and replace them again.

(Please

use  if necessary.)

3. Specifications of the AC adapter:

Hong Kong	Input :	AC 220V	50Hz
	Output:	DC 6V	350mA

Taiwan	Input :	AC110V	60Hz
	Output:	DC6V	350mA
U.S.A	Input :	AC110V	60Hz
	Output:	DC6V	350mA

4. You are highly recommended to use the AC adapter provided by our agency or other qualified brands. We assume no responsibility for any damage to the unit arising through the use of AC adapters which do not meet the specification mentioned above.
5. To keep the real-time clock in the unit working properly in case of a sudden power cut, please always keep good alkaline battery in the unit even if you are using an AC adapter.



Data recovery

1. The unit is able to recover the lost data caused by sudden power cut while preparing to save. Don't cut power, reset the unit or open the battery compartment in the process of making data recovery, otherwise, all the data will be lost permanently.
2. We strongly suggest the use of alkaline battery with sufficient power supply to prevent from sudden power cut which may result in data loss. Please make sure that there is

 
steady

electrical current, 6 volt power pressure and proper plugging while using adapter.

Resetting the Unit

 
Press  after replacing batteries or press  because of malfunction of the unit, a message "Please wait..." appears on the screen, then shows "Time and other setting may be changed, please reset if necessary", meanwhile the system checks itself automatically, and then goes to main menu.

 


 
 
 
 
 
 
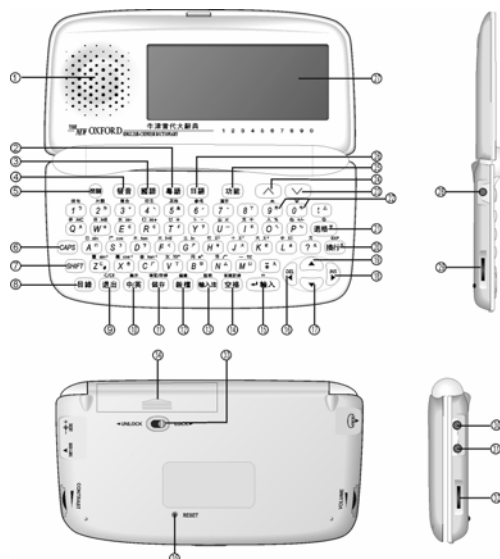 


 

 

1.3 Keyboard Layout



- | | |
|--|---|
| 1. Speaker | 2. Cantonese pronunciation |
| 3. Mandarin pronunciation | 4. English pronunciation |
| 5. On/Off | 6. Uppercase / Lowercase of Eng. letter |
| 7. SHIFT | 8. Menu |
| 9. Esc /C /CE modes | 10. Switch between Eng. & Chi input modes |
| 11. Save/Mark/Space | 12. New/Edit |
| 13. Chinese input methods/On-line help | 14. Space/View history list in Dict. |
| 15. ENTER / “=”in Calculation | 16. Left Arrow/Delete |
| 17. Down Arrow | 18. Right Arrow/Insert |
| 19. Up Arrow | 20. Linefeed |
| 21. Backspace / Time | 22. Scroll content by page in Dict. |
| 23. Page Down | 24. Page Up |
| 25. Function Key | 26. Japanese pronunciation |
| 27. LCD | 28. Earphone jack |
| 29. Volume Control | 30. AC adapter jack |
| 31. Data-link jack | 32. Display Contrast Control |
| 33. Battery compartment lock | 34. Battery compartment door |
| 35. Reset | |

Special Function Keys

The followings are special function keys. You should press  first and then press special function key instead of pressing them simultaneously to perform corresponding function.

- | | | |
|----|---|---|
| 1. |  +  | Switch display mode between Chinese and English |
| 2. |  +  | View On-line help |
| 3. |  +  | Display symbol |
| 4. |  +  | Display time (Remark: the function is unavailable in input mode or pop-up window appears) |
| 5. |  +  | Edit record |
| 6. |  +  | Delete record |
| 7. |  +  | Switch between inserting and overwriting |
| 8. |  +  | Set alarm in schedule |

 
1.4 Input Methods

11 input methods are available in the unit, they are English & Number, Symbol, Cangjie, Simple, Radical, Mandarin, Taiwan, Cantonese, Wang Ma 5-strokes, 5-strokes and Strokes. Cangjie and Simple only exist in traditional Chinese mode, Wang Ma 5- strokes only exists in simplified Chinese mode.


 
– English & Number



Input English word.

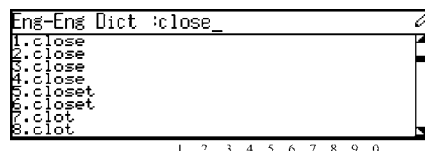 
Press  to switch between uppercase & lowercase.



 
– Symbol

 
Press  +  to display special symbols, and press

 
  to view more, then press numeric key to select any one.

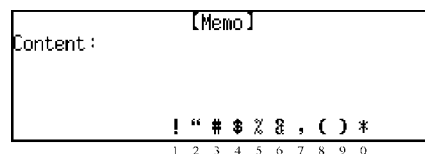

Chinese input methods

 
Press  to display Chinese input methods, press the relevant numeric key to select an input method, (The icon that represents the selected input method will be shown on lower left corner.)

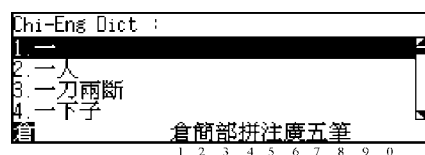

Note: It is available only in Chinese input mode, press  to switch between Chinese and English input mode.

 
– Cangjie (Only exists in traditional Chinese mode)

Input the Cangjie codes of a character, then press numeric key to select a desired character from the short list on the bottom of LCD. If there is only one character which corresponds to inputted codes, it will appear on

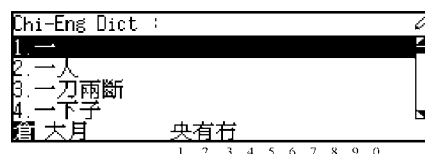

 
– **Wang Ma 5-strokes** (only exists in simplified Chinese mode)

 
Just input the codes of first three roots and the last root of the Chinese character. If the Chinese character has less than 4 roots, input the codes of its roots and a recognition code to make it 4 codes; if this still cannot make 4 codes, use SPACE key to make the balance.

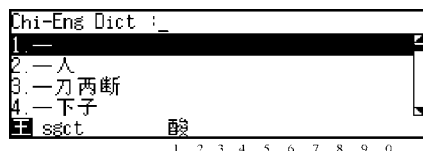

 
Note: Please refer to appendix “ 6.2 Chart of Wang Ma 5-strokes Input Method”.

 
– **5-strokes**

Input the codes of the first 4 strokes and the last stroke and press , then press numeric key to select any one. If the total strokes of the character are less than 5, input codes of the strokes sequentially.

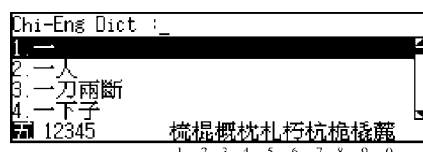


– **Strokes**

Input the number of the total strokes and press , then all relevant Chinese characters are displayed on the bottom of LCD, press numeric key to select any one.

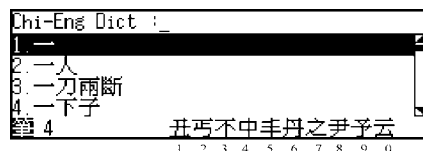



 


 



1.5 Automatic Power-off

- The unit will be automatically switched off if it is left idle within the automatic power-off period. Press  button to restart it. (The default automatic power-off period is 3 minutes.)
- If the unit is automatically powered off, the data you have inputted or edited will not be saved.
- The alarm will still function upon the set time even if the unit is power off.

1.6 Category of Content

4 main Categories such as Dictionary, Organizer, Calculation and Others are particularly designed for your convenient operation.

- Press     to highlight an item, and press  to enter the application, you can also press relevant numeric key directly.
- Press   to switch into main menu of the previous or next category.
- Press  to toggle among the categories circularly.
- Press  to switch display language between Chinese and English.

1.7 Cautions

- Avoid humidity. Never let water or other liquids flow into the unit.
- Don't place the unit under direct sunlight or near heat.
- Don't repair the unit by yourself! Bring the malfunctioned unit to our Customer Service Center for repair.
- Prevent the unit from falling down on the ground, bending or strong impact.
- Don't apply strong detergent cleaning agents to clean the unit.
- Don't touch the screen with sharp-headed objects.
- Before doing reset or sending the unit for repair, please keep a copy of all important data so as to re-input them later.

1.8 Trouble-shooting

Question : Automatic power-off period is too short, can it be changed?

Answer : Enter the automatic power-off setting mode, set the automatic power-off time longer or set it to "0", if you set it to "0", the Automatic power-off will be out of function. Automatic power-off can help you save power.

Question : Why can't the inputting data be saved?

Answer : Perhaps there isn't enough memory to save data, you may delete some useless data to get enough free memory.

Question : Why can't the unit be switched on?

Answer : (1) Perhaps the battery voltage is weak, please replace a new battery.
(2) Perhaps the method of replacing batteries is wrong, please make sure that the polarities of the batteries are correct.
(3) Perhaps the battery compartment door is open, please close it.
(4) Perhaps the battery compartment lock is open, please push the battery compartment lock to the position of "lock".

Question : Why isn't the screen clear?

Answer : Please press the Display Contrast Control to readjust it.

Question : Why the volume is too small or too big, the speed is too slow or too fast?

Answer : Reset them in the system setting, or adjust the Volume Control on the left side of the unit.

Question : What should I do if I forget the password?

Answer : If you forget the password, please take the unit to the local customer service center, the staff will clear the password for you. They have the right to ask you to show your

certificate of your ownership in order to protect your data.

1.9 Specification of the Parameter

1. Flash Memory Size: 2 MBits
2. Maskrom Size: 128 MBits
3. LCD Size: 240×79 dots
4. Memory size for saving Organizer records: about 1.8 MBits

Chapter 2 Dictionary

 
This unit provides various English/Chinese Dictionaries, and the total number of vocabulary amounts to 300,000.

2.1 English-Chinese Dictionary



The dictionary collects vocabularies both in Eng-Chi Dictionary and Oxford Dictionary. You can search an English word or phrase out by inputting them or sequential search. In details mode, you can view the phonetic alphabet, Chinese explanation and grammars. Cross-search function is available in this Dictionary. You may also listen to pronunciations of Mandarin, Cantonese and English.

2.1.1 General Search

Choose "Eng-Chi Dictionary" in the dictionary menu, input the desired word/phrase, then press

 輸入 to confirm.

Press   to choose word/phrase orderly.



Press   to scroll the list by page.

 


Note: If there is ">" before the word, it represents that word belongs to Eng-Chi dictionary, Otherwise, the word belongs to Oxford Dictionary.

Press   to scroll the content by line.

Press   to scroll the content by page.

 
Press   to view the previous/next matched

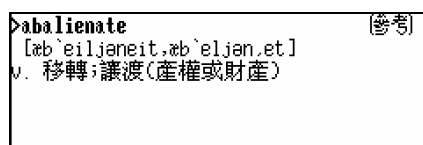

word.

Press to listen to the relevant pronunciation.

When [••] appears on the upper right corner of the screen, press to view the grammar.

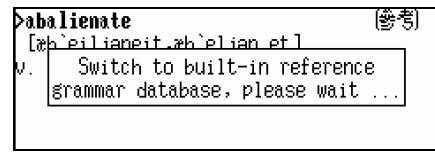 


Press numeric key or to view the Verb.



 
Press to enter function mode.

Press numeric key or press and to select an item.

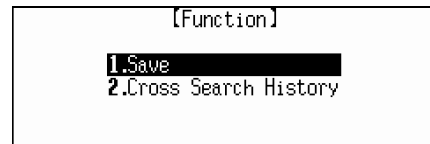

Choose "Save" to save record for revision and test.

You may also press to save record.

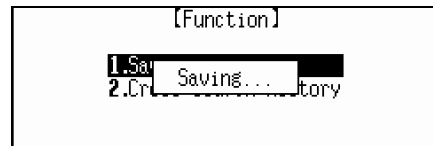 


In the input mode or view mode, press to view the Dictionary-History List.

Press to choose record orderly.

Press to scroll the list by page.

Press to view the details of the chosen word.

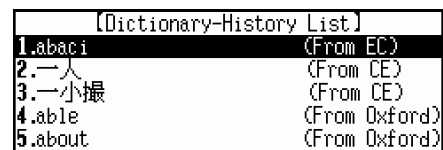

2.1.2 Spell-check & Nearest Word

These two functions are usually used when the inputted word/phrase is wrongly spelt or unavailable in the Dictionary. Spelling alternatives generated by program according to the input word or phrase will be listed for your choice.

Note: Please refer to "2.6.2 Spell-check & Nearest word" for details.

2.1.3 Wildcard Search

If a part of word or phrase is uncertain, input "?" or "*" to search by Wildcard Search. ("?"

represents one uncertain letter, "*" represents one or more uncertain letters.

 
Note: Please refer to "2.6.3 Wildcard Search" for details.

 
2.1.4 Oxford Dictionary

If the inputted word/phrase can be found in Oxford Dictionary, then the unit will enter Oxford Dictionary automatically to view the explanations of the words.

Input "apple" and press  to confirm.

After searching, it will enter the explanation screen of Oxford Dictionary.

Press  to return to Eng-Chi Dictionary.

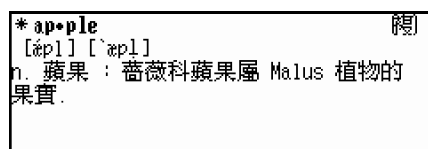

Note: About other operations, please refer to "2.6 Oxford Dictionary" for details.

2.1.5 Cross-search

 
In the explanation screen, you can highlight any desired Chinese or English word/phrase to perform Cross-search function.



 
Note: Please refer to "2.6.6 Cross-search for details.

 
2.1.6 Eng-Chi User's Dictionary

If you have created your user-defined records in Eng-Chi User's Dictionary, you can also view those user-defined records in Eng-Chi Dictionary. (Please refer to "2.9.1 Eng-Chi User's Dictionary" for creating user-defined record.)

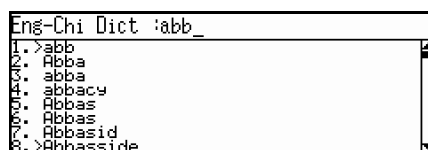Input any character/phrase which exists both in Built-in Dict. and User's Dict.



Press numeric key or press   and  to choose one dictionary to view its explanation.

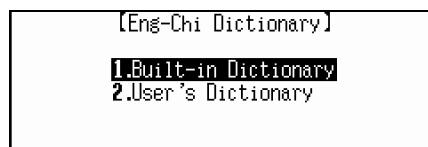 




Note: If the character /phrase only exists in Eng-Chi User's Dictionary, it will enter the user's dictionary directly to view its explanation.



2.2 Chinese-English Dictionary

 
You can view English explanation for any Chinese character/phrase by inputting them or sequential search. There are 9 Chinese input methods, namely Cangjie, Simple, Radicals, Mandarin/Cantonese, Taiwan, Wangma, 5-Stroke and Strokes. You can input Chinese character by any kind of Chinese input method.

2.2.1 General Search

Choose "Chi-Eng Dictionary" in the dictionary menu.
Input the desired character/phrase or select it from the list, then press  to confirm.

 
Press   to choose word/phrase orderly.

 
Press   to scroll the list by page.

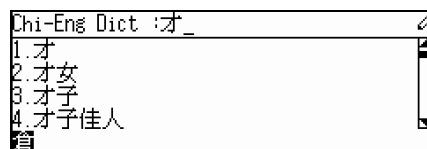

2.2.2 Nearest Word



If the Chinese character/phrase inputted can't be found in this dictionary, you can choose to view the Nearest Word in the dictionary.

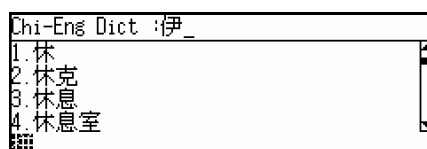Input a character which is not collected in Chi-Eng Dictionary, then press  to confirm.

 


Press   to scroll the content by line.



 
Press   to scroll the content by page.

 
Press   to view the previous/next matched word.

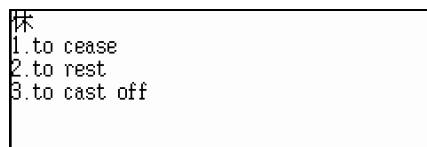Press    to listen to the relative pronunciation.

 
 


 
Press  to enter function mode.

 
Press numeric key or press   and  to choose one item.

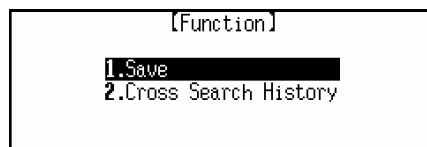





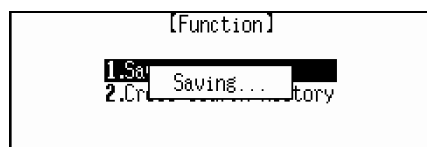Choose "Save" to save the record for revision and test.

 
You also can save the record by pressing  .



In the input mode and view mode, you can press  to view the Dictionary-History List.

Press   to choose record orderly.

Press   to scroll the list by page.

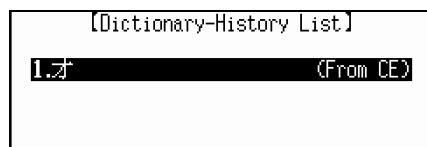



Press  to view the details of the chosen record.

 
2.2.3 Wildcard Search

If a part of word or phrase is uncertain, input "?" or "*" to search by Wildcard Search. ("?" represents one uncertain character, "*" represents one or more characters.)

e.g. input "●?", then press  to confirm.

Press   to view the previous/next records.

Press  to return to input mode.

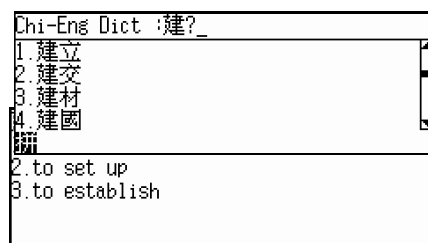

2.2.4 Cross-search

 
In the explanation screen, you can highlight any English word/phrase to cross-search to Oxford Dictionary, Eng-Chi Dictionary and Eng-Eng Dictionary.



 
Note: Please refer to "2.6.6 Cross-search" for details.

 
2.2.5 Chi-Eng User's Dictionary

If you have created your user-defined records in Chi-Eng User's Dictionary, you can also view those user-defined records in Chi-Eng Dictionary. (Please refer to "2.9.2 Chi-Eng User's Dictionary" for creating user-defined record.)

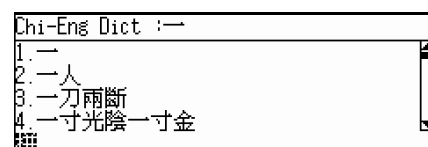Input the desired character/phrase which exists both in Built-in Dict. and User's Dict.



Press the numeric key or press   and  to choose one dictionary to view its explanation.

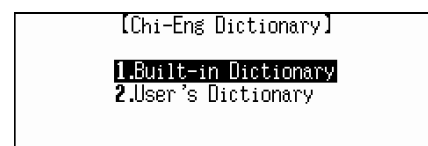

 
Note: If the desired character/phrase only exists in Chi-Eng User's Dictionary, it will enter the user's dictionary directly to view its explanation.





2.3 Chinese-Chinese Dictionary

 
You can view the Chinese explanations and other information of Chinese characters, including Taiwan, Strokes, Mandarin, Cangjie and Radicals, etc..

2.3.1 General Search

 

Choose "Chi-Chi Dictionary" in the dictionary menu.



Input the desired Chinese character, then press  to confirm.

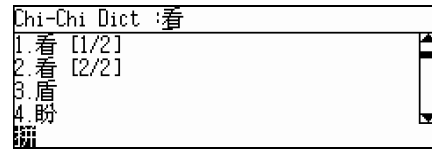 
Press   to choose character orderly,
press   to scroll the list by page.





Press   to scroll the content by line.

Press   to scroll the content by page.

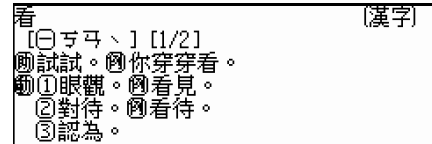 
Press   to view the previous/next matched word.



 
 
Press   to listen to the relevant pronunciation.

 
7.

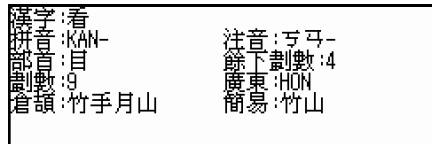

Press to view other information of the





 
 
Chinese character, including Taiwan, Strokes, Mandarin, Cangjie and Radicals, etc.

 
Press   to return to the previous screen.

In the input mode and view mode, you can press  to view Dictionary-History List.

Press   to choose record orderly.

Press   to scroll the list by page.

Press   to view the explanation of the chosen word.

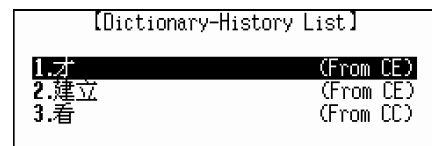

2.3.2 Cross-search

In the explanation screen, you can highlight any Chinese character/phrase to cross-search to Chi-Eng Dictionary and Chi-Chi Dictionary to.

Note: Please refer to "2.6.6 Cross-search" for details.

 
2.4 English-English Dictionary



You can search the desired English word/phrase out and view its English explanation by inputting



them or sequential search.

 
2.4.1 General Search

Choose "Eng-Eng Dictionary" in the dictionary menu.

Input the desired word/phrase, then press  to confirm.

Press   to choose word/phrase orderly,

 
press   to choose word/phrase by page.

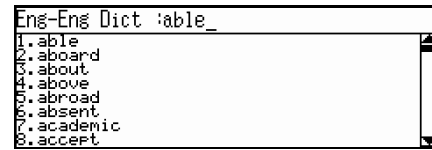



 
2.4.2 Spell-check & Nearest Word

 
These two functions are enable when the inputted word/phrase is wrongly spelt or unavailable in the Dictionary. Spelling alternatives generated by program according to the inputted word or phrase will be listed for your choice.

Input "aboue" (misspelling of "about"), then press

 to confirm.




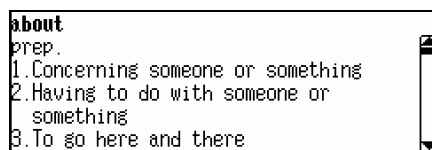 
Press numeric key or press   and  to choose "Nearest Word" or "Spelling Alternative".

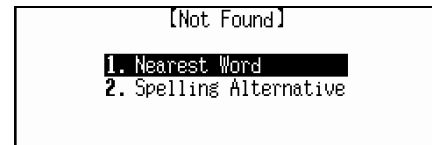

Nearest Word

If you choose "Nearest Word", you can view the explanation of the nearest word.

 
Press  to return to the input mode.

 


Spelling Alternative

If you choose "Spelling-Alternative", it will list all corrected word/phrase according to the inputted word/phrase. ("Not Found!" will be shown, if no matched word can be found.)

Press   to highlight any record and press

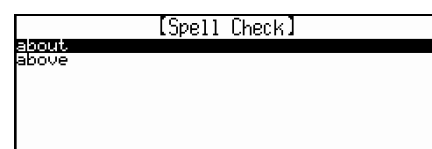 


 to view the explanation.

2.4.3 Wildcard Search

If a part of word or phrase is uncertain, input "?" or "*" to search by Wildcard Search. ("?" represents one uncertain letter, "*" represents one or more uncertain letters).

 
Input "abl?", then press  to confirm.

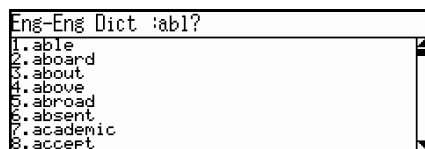 


 
Press   to view the previous/next word.



Press   to scroll the content by line.



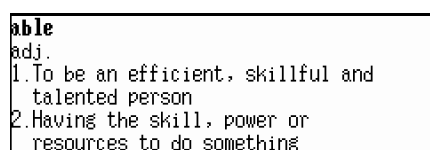Press   to scroll the content by page.

 
Press  to listen to the English pronunciation of the headword or highlighted word.

 


In the input mode and view mode, you can press  to view Dictionary-History List.

Press   to choose record orderly.

Press   to scroll the list by page.

Press  to view the explanation of the chosen record.

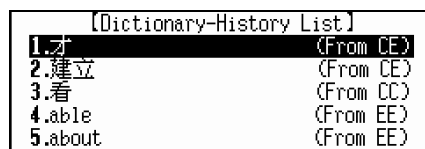

 
2.4.4 Cross-search

 
In the explanation screen, you can highlight any English word/phrase to cross-search to Oxford Dictionary, Eng-Chi Dictionary or Eng-Eng Dictionary.



 
Note: Please refer to "2.6.6 Cross-search" for details.

 
2.4.5 Eng-Eng User's Dictionary

If you have created your user-defined records in Eng-Eng User's Dictionary, you can view those user-defined records in Eng-Eng Dictionary. (Please refer to "2.9.3 Eng-Eng User's Dictionary" for creating user-defined record.)

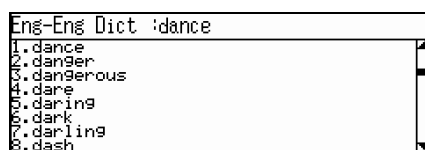Input any word/phrase which exists both in Built-in Dict. and User's Dict., then press  to confirm.



Press the numeric key or press   and  to choose one dictionary to view its

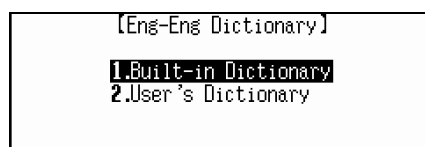

explanation.

 
Note: If the desired word/phrase only exists in Eng-Eng User's Dictionary, it will enter the User's dictionary directly to view its explanation.





2.5 Network Dictionary

 
This dictionary collects many words used commonly in network. You can search the desired word/phrase out by inputting them or choose them from browse list.

2.5.1 General Search

Choose "Network Dictionary" in the dictionary menu.


Input the desired word/phrase and press  to Confirm.

 
Press   to choose word/phrase orderly, press   to scroll the list by page.

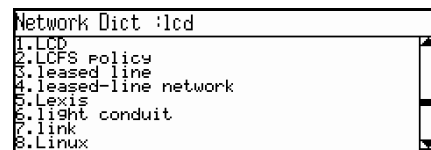

 


 
2.5.2 Spell-check and Nearest Word

These two functions are enable when the inputted word/phrase is wrongly spelt or unavailable in the Dictionary. Spelling alternatives generated by program according to the inputted word or phrase will be listed for your choice.

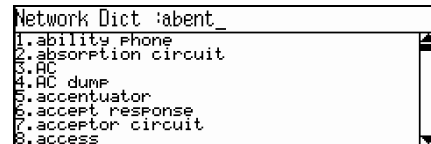Input "abent"(misspelling of "abend"), then press  to confirm.

 


 
Press numeric key or press   and  to choose "Nearest Word" or "Spelling Alternative".

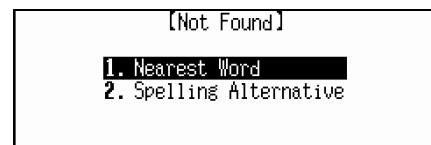

Nearest Word



 
If you choose "Nearest Word", you can view the explanation of the nearest word.

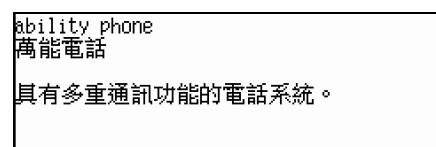

Press  to return to input mode.

 


Spelling Alternative

If you choose "Spelling Alternative", it will list the corrected words according to the inputted word ("Not Found!" will be shown, if no matched word can be found.)

 
Press   to highlight any word in the list, then press  to view the explanation.

Press   to return to the input mode.

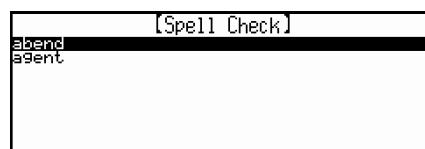



2.5.3 Wildcard Search

 
 
 
If a part of word or phrase is uncertain, input "?" or "*" to search by Wildcard Search. ("?" represents one uncertain letter, "*" represents one or more uncertain letters.)

 
Input "aben?", then press  to confirm, then go to the explanation screen of the first relevant word.

Press   to scroll the content by line.

Press   to scroll the content by page.

Press   to view the previous/ next matched words.

Press    to listen to the relevant pronunciation.

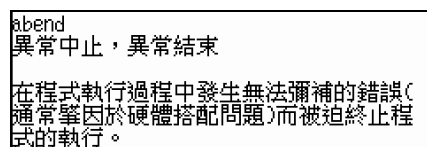

2.5.4 Cross-search

In the explanation screen, you can highlight any Chinese character or English word/phrase to cross-search to Oxford Dictionary, Eng-Eng Dictionary, Chi-Eng Dictionary and Chi-Chi Dictionary.

Note: Please refer to "2.6.6 Cross-search" for details.

2.6 Oxford Dictionary

 
You can search an English word or phrase out by inputting them or select them from the browse list.



In details mode, you can view the phonetic alphabet, Chinese explanation and grammars.



[MD7900 User Manual]

 
Cross-search function is available in this dictionary. You can also listen to pronunciation of Mandarin, Cantonese and English.

2.6.1 General Search

Choose "Oxford Dictionary" in the dictionary menu.
the desired word/phrase and press  to confirm.

Press   to choose word/phrase orderly.

Press   to scroll the list by page.

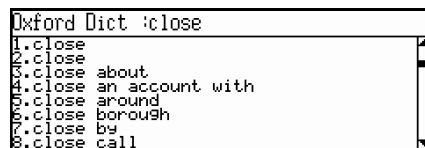 


 
Input

2.6.2 Spell-check & Nearest Word

 
These two functions are enable when the inputted word/phrase is wrongly spelt or unavailable in this Dictionary. Spelling alternatives generated by program according to the inputted word or phrase will be listed for your choice.

Input "clowe" (misspelling of "close") then press

 to confirm.

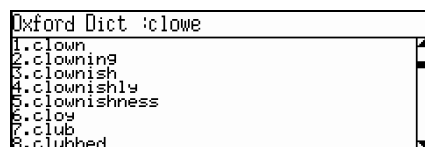

 
press numeric key or   and  to choose "Nearest word" or "Spelling Alternative".

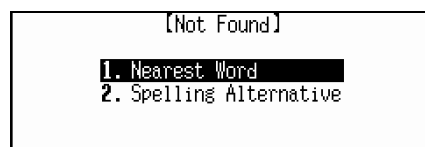

Nearest Word

Choose "Nearest Word" to view the details of the nearest word.

Press  to return to input mode.

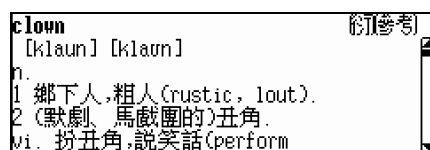


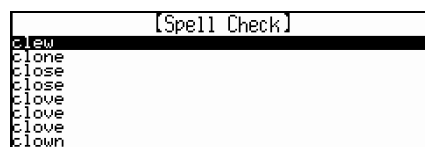 
Spelling Alternative

 
If you choose "Spelling Alternative", it will list all corrected words/phrases according to the inputted word/phrase. ("Not Found!" will be shown, if no matched word can be found.)

Press   to highlight any word in the list.

Press  to view the explanation.

 
Press  to return to the input mode.



Note: The searching time may be longer, you can stop searching by pressing .

2.6.3 Wildcard Search



If a part of word or phrase is uncertain, input "?" or "*" to search by Wildcard Search. ("?" represents one uncertain letter, "*" represents one or more uncertain letters.)

 
 

Input "appl?" and press  to confirm, then go to the explanation screen of the first matched word.

 


Press   to scroll the content by line.



 
Press   to scroll the content by page.

 
Press   to view the previous/ next matched words.

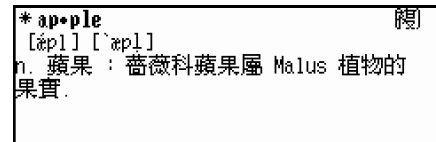Press    to listen to the relevant pronunciation.



 
Press  to enter function mode.



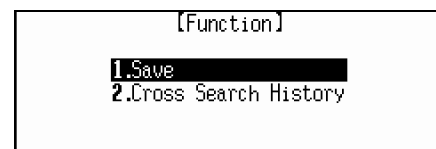Press numeric key or press   and  to select an item.





 
Choose "Save" to save the record for revision and test.

 


In the input mode or view mode, press  to view the Dictionary-History List.

Press   to choose record orderly.

 
Press   to scroll the list by page.

 
Press  to view the details of the chosen word.

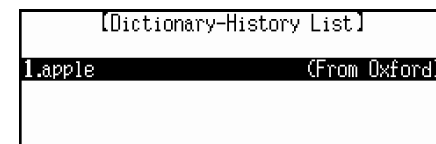

2.6.4 Eng-Chi Dictionary Search

 
If the inputted word/phrase cannot be found in Oxford Dictionary, but can be found in Eng-Chi Dictionary, the unit will go to Eng-Chi Dictionary automatically.

Input "www", press  to confirm.

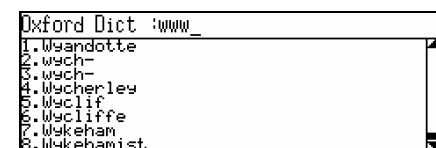

After searching, it will enter the explanation

[MD7900 User Manual]

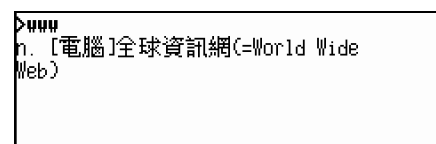

screen of Eng-Chi Dictionary.

Press to exit.

Note: About other operations please refer to "2.1 Eng-Chi Dictionary" for details.

2.6.5 Grammar Inquiry

 
while viewing some English word, you can inquire the oxford Built-in Grammar, Instant-Dict Grammar or Oxford paradigm. The Oxford Built-in Grammar includes phrase, compound word, derivative, others and example; the Instant-Dict Grammar includes grammar ,example, run-ons, synonym, antonym, confuse word in meaning, adjective.

Note: The indicators that appear on the upper right corner indicate available grammars.

In the view mode, press relevant key to inquire relevant grammar.

e.g. In the view mode of "close",

 
- press for the example;
- press for phrase;
- press for compound word;
- press for derivative.

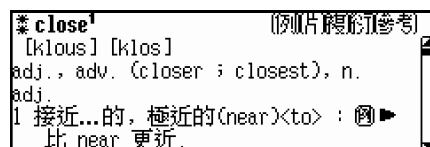

Note: 1. If the indicator [•] appears, press to inquire other grammars.

 
Press to view Instant-Dict Grammar.

Press numeric key or and to choose any item.

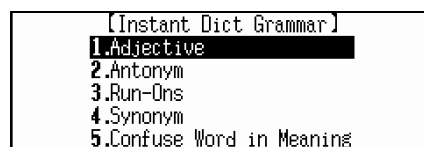

Press + to view Oxford paradigm.

Press or to scroll the content by line or by page.

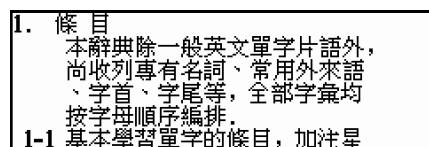 


2.6.6 Cross-search

In the explanation screen, you can highlight any Chinese character or English word/phrase to perform cross-search function.

In the explanation screen of the word "close",

Press to activate highlight function, press to highlight any Chinese character or English word.

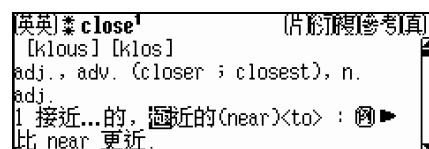

Note: You can highlight more than one word by pressing **SHIFT** + **DEL** **INS**.

Highlight a Chinese character,

press **↵** or **功能** to enter function mode.

 
Press numeric key or press **▲** **▼** and **↵** to choose an item.



Note: If the highlighted character only exists in Chi-Eng Dictionary or Chi-Chi Dictionary, press **↵** or **功能**, it will go to the relevant dictionary directly.

Highlight an English word, press **↵** or **功能** to enter the function mode.

Press numeric key or press **▲** **▼** and **↵** to choose an item.

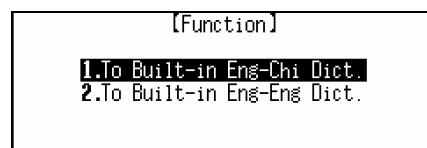

 
Note: If the highlighted word only exists in Eng-Chi Dict./Oxford Dict./Eng-Eng Dict., press **ENTER** or **功能** will go to the relevant dictionary directly.

If you have performed cross-search function several times, press **功能** and choose “Cross Search History” to view Cross Search History List.

Press **▲** **▼** to choose record orderly.

Press **^** **v** to scroll the list by page.

Press **↵** to view the explanation of the chosen word.

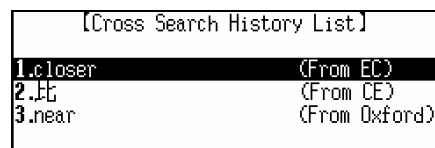

Note: 1. The Cross Search History list is only available to headword;

2. Press **C/CE** **退出** **目錄** and choose “Oxford Dictionary” back to Oxford Dictionary.

2.7 Conversation



 
It includes huge storage of the daily conversation and classified in 12 categories. You can cross-search to Oxford, Eng-Chi, Eng-Eng, Chi-Eng and Chi-Chi Dictionary, you can also listen to the Chinese/English/Japanese pronunciation.



Choose “Conversation”.

 
 
 
 
Press numeric key directly or press **▲** **▼** and **↵** to select an item.

 



e.g. choose "BASIC CONVERSATION".

Press numeric key directly or press  
and  to select an item.

Press   to view the previous/next sentence.

Press     to listen to the pronunciation of the sentence in English/ Japanese/Mandarin/Cantonese.

Press  to back to the previous screen.

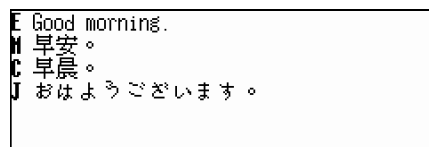



 
E Good morning.
M 早安。
C 早晨。
J おはようございます。



Note: Cross-search function is available in this application, please refer to the relevant instructions of dictionaries.


2.8 Vocabulary

It includes huge storage of vocabularies and classified in 17 categories. You can cross-search to Oxford, Eng-Eng, Chi-Eng and Chi-Chi Dictionary. You can also listen to English / Mandarin / Cantonese pronunciation.

Choose "Vocabulary" in the dictionary menu.


Press numeric key directly or press   and  to select an item.

press   to scroll the list by page.

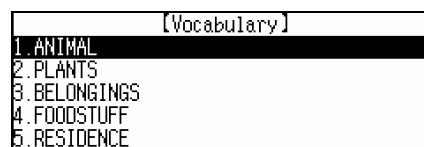
 


 

 
[Vocabulary]
1. ANIMAL
2. PLANTS
3. BELONGINGS
4. FOODSTUFF
5. RESIDENCE

 
e.g. choose "ANIMAL" in Vocabulary menu, then choose "HEAD" by the same way mentioned above.

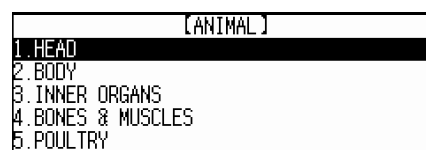


[ANIMAL]
1. HEAD
2. BODY
3. INNER ORGANS
4. BONES & MUSCLES
5. POULTRY

Press   to view the previous/next record.

Press    to listen to the English / Mandarin/ Cantonese pronunciation.

Press  to back to the previous screen.

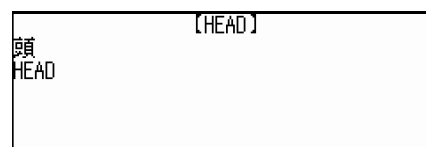

[HEAD]
頭
HEAD



 
Note: Cross-search function is available in Vocabulary, please refer to the instructions of dictionaries.

 
2.9 User's Dictionary

[MD7900 User Manual]



 
It contains Eng-Chi User's Dictionary, Chi-Eng User's Dictionary and Eng-Eng User's Dictionary. You can create user-defined records to expand the storage of dictionaries. User-defined record can be searched in Eng-Chi, Chi-Eng and Eng-Eng Dictionary.

 
Choose "User's Dictionary" in the dictionary menu.

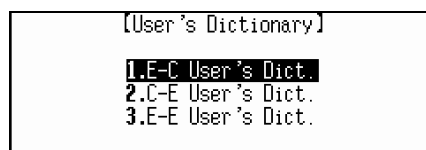Press numeric key or press   and  to select an item.




 
2.9.1 Eng-Chi User's Dictionary

 
Input the headword and its Chinese explanation, (Press   to move cursor between the two input fields.) then press  to save.

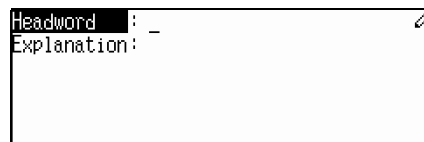



 
Note: Headword must be inputted for saving record.

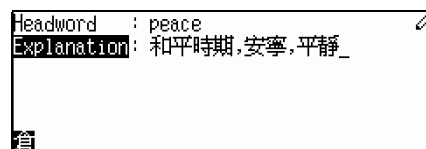

e.g. input "peace", then press  and input its Chinese explanation.

 
Press  to abort.





Note: In input mode, press  to choose "Renew Record" or "Save Record".

In the index mode, press   and  to view a record.



Press   to scroll the list by page.

Press  to create a new record.

Press  +  to edit the record.


Press  +  to delete the record.





In the view mode, press   to scroll the content by line.

 
Press   to view the previous/next record.


Press  to create a new record.

Press  +  to edit the record.



Press  +  to delete the record.

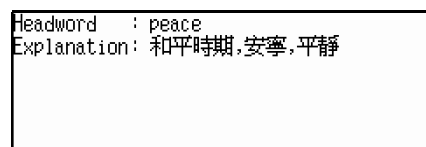Press    to listen to the relevant pronunciation.

 


 
Note: In the index or view mode, press  to choose "New", "Edit" or "Del".

2.9.2 Chi-Eng User's Dictionary

Input the Chinese headword and its English Explanation, (Press   to move cursor

[MD7900 User Manual]

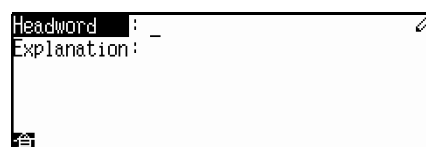

 



between the two input fields.) then press  to save.

Note: 1. Headword must be inputted for saving record.

2. About other operations, please refer to "2.9.1 Eng-Chi User's Dictionary" for details.

2.9.3 Eng-Eng User's Dictionary

Input the headword and its English explanation, (Press   to move cursor between the two input fields.) then press  to save.

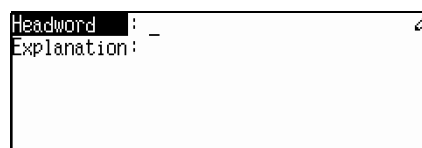



 
Note: 1. Headword must be inputted for saving record.


2. About other operations please refer to "2.9.1 Eng-Chi User's Dictionary" for details.

2.10 Revision Test

Revision Test consists of five tests: namely Oxford Revision, Eng-Chi Revision, Chi-Eng Revision, Oxford Test and Eng-Chi Test. Relevant records should be stored in each dictionary before having Revision Test.



 
Choose "Revision Test".

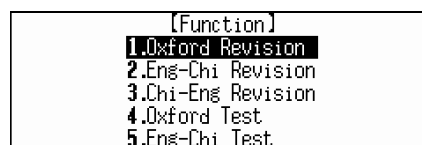Press relevant numeric key or press   and  to select an item.




2.10.1 Oxford Revision

 
Choose "Oxford Revision".

Press relevant numeric key directly or press   and  to select the format of revision.



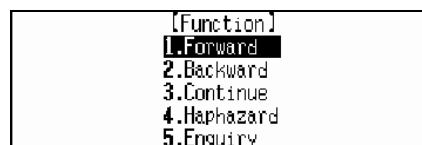


 
(If there is no record saved before, pop-up message "Not Found!" will appear.)

 


Choose "Enquiry".

Input keywords or select the desired word directly from the list displayed, and press  to view its explanation.



Press   to scroll the content by line.
 Press   to view the previous or next record.
 Press  to choose delete record or not.
 Press  for the English pronunciation.

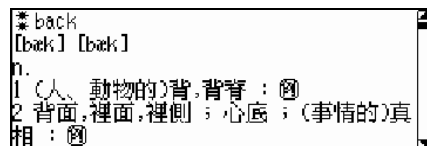

2.10.2 English-Chinese Revision

Note: Please refer to “2.10.1 Oxford Revision” for details.



 
2.10.3 Chinese-English Revision

 
Note: Please refer to “2.10.1” Oxford Revision” for details.




 
2.10.4 Oxford Test

 
In Oxford Test, you should input English word or phrase according to its Chinese explanation.

 
Choose “Oxford Test”.

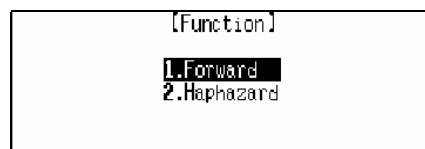 
Press numeric key directly or press   and  to select an item.

 
 



 
Press   to view the previous or next record.
 Press  to choose to view Answer or Result.
 Press  to listen to the English pronunciation for the headword.

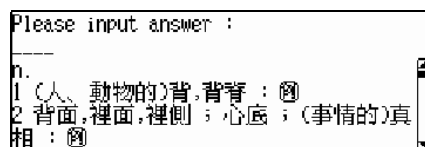

 
Input word or phrase according to its pronunciation and Chinese explanation, then press  to view the result. (If the inputted word is right, “Right!” will appear; otherwise, “Wrong!” will appear.)

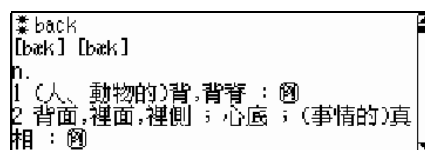 


Press   to show the previous or next record.

Press  or  to enter Function mode.

Press  to view the result.

Press  to exit.

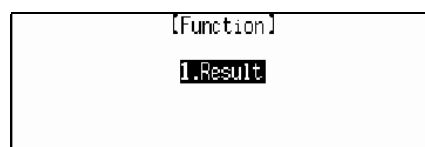

2.10.5 English-Chinese Test

Note: Please refer to “2.10.4 Oxford Test” for details.

Chapter 3 Organizer

 
3.1 Personal Information



Saving personal information for your reference.

3.1.1 Inputting Data



Enter “Personal Information”.

 
Press  to switch Chinese and English input


In Chinese input mode, press  to choose a input method.


Press   to move the cursor to different input field.



 
Press   to turn page.

In “Sex” and “Blood Type” fields, press   to change the selection.

 
Press  to save data.

 
You may also press  and choose “Save Record” to save data. You must input data in Name field, if you want to save it.

In input mode or edit mode, press  to enter function mode.


Press the numeric key or press   and  to perform corresponding function.

Choose “Renew Record”.


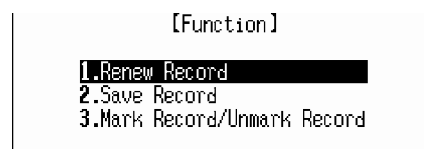
Press  to reserve the data.

Press  to delete the data and input new data

Choose “Mark Record/Unmark Record” to mark

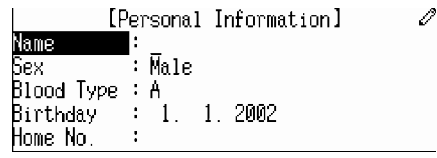 


mode.
Chinese



again.



the record for locking.(If the record has been marked before, choose this function to unmark it.)

You may also press  to mark/unmark record.


Note: 1. Only when the password is preset in System Setting either, the marked record can be locked. If you want to view the marked record, you must clear or turn off the password in System Setting first.



 
2. In any one application of Organizer, if you haven't saved a record before entering another one, the message below will appear. "Warning: New entry is pending in last application. Press [Y] to abort the entry. Press [N] to return entry."

3.1.2 Editing and Deleting Data

In view mode, press   to scroll the content by line.

```
[Personal Information]
Name      : ivy
Sex       : Female
Blood Type : O
Birthday  : 12. 25. 1979
Home No.  : 07598145313
```

 
In view mode, press .

 
Press the numeric key or press   and  to perform corresponding function.

```
[Function]
1.Edit
2.Del
```


 
Choose "edit" to edit the record.

Choose "Del" to delete the record.

Press  to confirm.

Press  to abort.

```
[Function]
Delete this record?
Y / N
```

Note: In view mode, you can also press  +  to edit the record or press

 
 +  to delete the record.

3.2 Telephone Directory

With this function, you can input personal information like name, telephone, etc., to make up records for your reference.

3.2.1 Inputting Data

Enter “Telephone Directory”.

Press  to save data after inputting completely. (You must input data in Name field.)





```

[Telephone]
Name      :
Category  : relative
Tel Number :
Pager No. :
Fax Number :
    
```

In Category field, press   to change the selection.

Note: About inputting data, please refer to “3.1.1 Inputting Data” for details.

3.2.2 Searching Data

In index mode, press   to search the record one by one, press   to turn

```

[Telephone]
cathy     Classmate 020-86765533
jack      Friend    0759-8467991
jenny     Colleague 0760-6588721
田森     Colleague 0568-453281
林恒     Classmate 0765-992346
    
```

page.


In view mode, press   to scroll the content by line.



 
Press   to view the previous or next

```

[Telephone]
Name      : jenny
Category  : Colleague
Tel Number : 0760-6588721
Pager No. : 95800-13659
Fax Number : 287508435
    
```

record.





 
Press  in index mode or view mode.

Press the numeric key press   and  to perform corresponding function.

```

[Function]
1.New
2.Edit
3.Del
4.Family Name List
5.Keyword Search
    
```

Choose “Family Name List” to display all the names that have been inputted.

Press     to highlight the desired name and press  to search the record.

```

[Family Name List]
AZ 田 林
    
```

family



 
family

Highlight “AZ” to search the English name.



 
[MD7900 User Manual]

```

cathy     Classmate 020-86765533
jack      Friend    0759-8467991
jenny     Colleague 0760-6588721
    
```

Press   to choose a record and press  to view.

 
Highlight “●” to search the Chinese name.

 
Press   to choose a record and press  to view.




Note: If there is English name in the records, “AZ” will appear before the Chinese Family name(s), otherwise, it won't appear. Same for the Chinese Family name(s).



 
Choose “Keyword Search”.

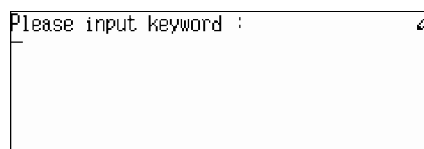 
Input the keyword and press  to confirm.

 


3.2.3 Editing and Deleting Data

 
Press  in index mode or view mode.

Press the numeric key or press   and  to perform corresponding function.

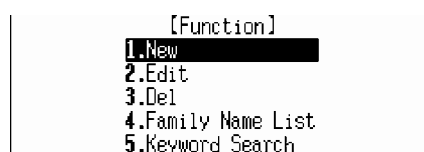 



 
Choose “Edit” and press  to edit the record.



 
Choose “Del” to delete the record.

Press  to confirm.

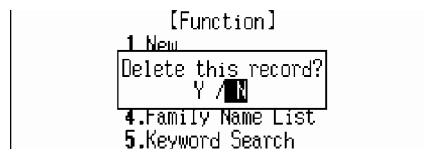Press  to reserve the data and exit.



Note: In index mode or view mode, you may also press  +  to edit the record;

 
press  +  to delete the record or press  to create a new record.

3.3 Memorandum

With this quick and convenient function, you can input, edit, view and delete records at any time.

3.3.1 Inputting Data



Enter “Memorandum”.



Press  to save data after inputting completely.

 




Note: About inputting data, please refer to “3.1.1 Inputting Data” for details.



3.3.2 Searching Data

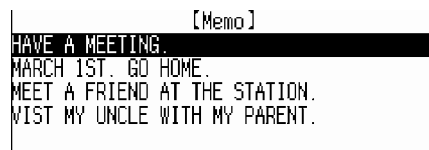 
In index mode, press   to search the record one by one.





Press   to scroll the list by page.



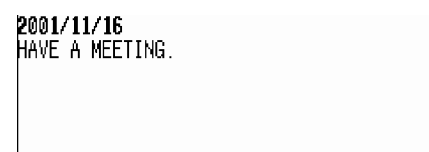



In view mode, press   to scroll the content by line.

 
Press   to view the previous or next record.

 


Press     to highlight the word to perform cross searching function.

Note: Please refer to “2.6.6 Cross-search” for details.

In index mode or view mode, press .
 Press the numeric key or press   and
 to perform corresponding function.

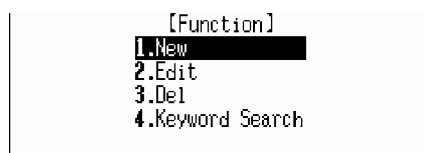

Choose “Keyword Search”.
 Input the keyword and press  to confirm.



 
 

3.3.3 Editing and Deleting Data

 
Note: Please refer to “3.2.3 Editing and Deleting Data” for details.

 

3.4 Schedule

You can record date, time and contents of a schedule or an appointment, which will be marked both in solar and lunar calendar. There is also an alarm function to remind you of the appointment time. You can be reminded if there is any clash in schedule.





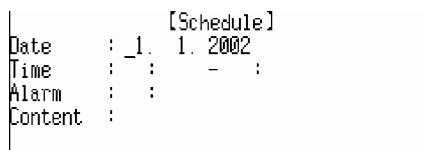3.4.1 Inputting Data

 
Enter “Schedule”.
 Press  to save after inputting data.
 (You must input data in Content field.)
 Press  and  for AM and PM time format respectively.





 
*Note: 1.About inputting data, please refer to “3.1.1 Inputting Data” for details.
 2.Input the time and press  to set alarm on, at the same time,  will appear on screen. The alarm will function upon the alarm time.*

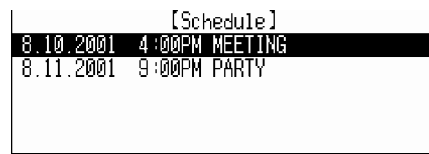

3.4.2 Searching Data



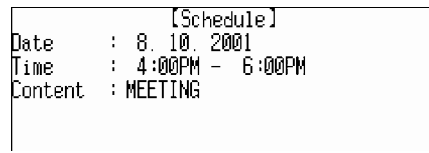

In index mode, press   to search the record one by one, press   to scroll the list by page.

 


In view mode, press   to scroll the content by line.




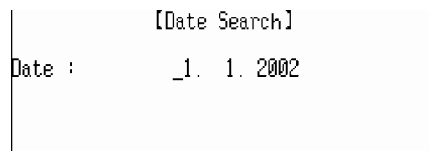 
Press   to view the previous or next record.

In index mode or view mode, press . Press the numeric key or press   and  to perform corresponding function.

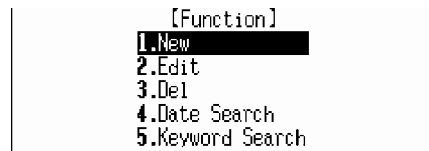


Choose “Date Search”.

Input the date and press  to search.



Choose “Keyword Search”.

Input the keyword and press  to search.



3.4.3 Editing and Deleting Data

 
Note: Please refer to “3.2.3 Editing and Deleting Data” for details.



3.5 To Do List

To Do List can be divided into two status: “Done” and “To Be Done”. User can deal with the affairs quickly and clearly.

3.5.1 Inputting Data

Enter "To Do List".



Press  to save after inputting data.

Press   in "Category", "Priority" and "Status" fields to change the selection.

```
Due Date : 1. 1. 2002
Category : Personal
Priority : 1
Status : To be done
Content :
```

Note: About inputting data, please refer to "3.1.1 Inputting Data" for details.

3.5.2 Searching Data

In index mode, press   to switch to view the records of "To be done" or "Done".

```
      [To Be Done]
8.25[1] ! have a celebration.
8.27[1] ! have a lunch with an old frie
8.28[2] ! go to the station meet mr.smi
8.29[n] ! have a meeting.
```

Note: Please refer to "3.4.2 Searching Data" for


 
details.

3.5.3 Editing and Deleting Data

Note: Please refer to "3.2.3 Editing and Deleting Data" for details.

3.6 Time



Local Time and World Time are displayed at the same screen for your convenience.

 
You can set the time of any city as the local time. You can look up the current time by pressing  +  at any time(except in input mode or when a pop-up window appears).

Enter "Time".

TAIPEI	LOS ANGELES
2002	2002
Jul. 22	Jul. 21
Monday	Sunday
9:55AM	5:55PM



Press  to enter function mode.



Press the numeric key or press   and

 
 
 to perform corresponding function.

 
```
      [Function]
1.Set Local City  6.Local DST Mode
2.Set World City 7.World DST Mode
3.Set Date
4.Set Time
5.Daily Alarm
```

Choose “Set Local City”.



Press   to search the city one by one.



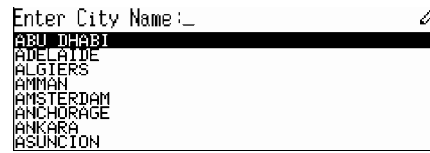Press   to scroll the list by page.

 
Highlight the desired city and press  to confirm. Or you may input the city directly and press  to confirm.




Choose “Set World City”.

Press   to search the city one by one.

Press   to scroll the list by page.

 
Highlight the desired city and press  to confirm.

 
Or you may input the city

directly and press  to confirm.

 


Choose “Set Date”.

 
Input the date and press .

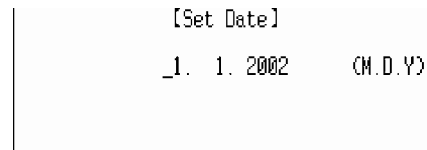

Choose “Set Time”.


Input the time and press .

Press  and  for AM and PM time format respectively.)

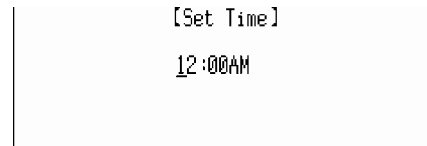 


 
Note: You just need to set the Local date and time, the World date and time will be changed automatically according to Local date and time.

Choose “Daily Alarm”.

Input the time and press  to move cursor to the next field.

Press   to choose “ON/OFF”.



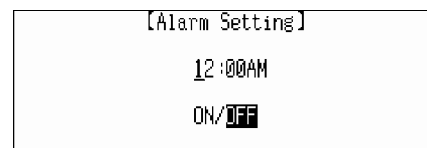Press  to confirm after completing.



 
Note: If the alarm is on, the alarm will function upon the alarm time even if the unit is power off. When alarm sounds, [🔔] will appear on the screen.

If the alarm is off, the alarm will not sound even if the unit is power on.



Choose “Local DST Mode”.

Press   to choose ON / OFF.

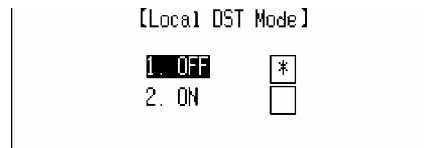 
Press  to confirm.




 
Choose “World DST Mode”.

Press   to choose ON / OFF.

 
Press  to confirm.

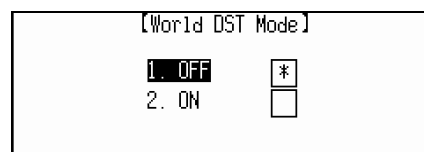

Note: If the Local(World) DST is on, one hour will be added in Local(World) time automatically, at the same time, 🌞 will appear on the screen.

You can look up the current time by pressing  +  (except in input mode or when a pop-up window appears).

Press  to exit.

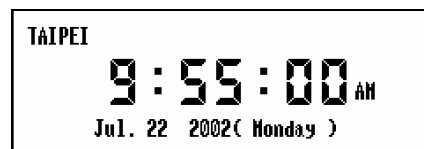



Note: You can set the date format and 12/24-hour time format in System Setting.

3.7 Calendar

It provides a solar calendar covering the year of 1901-2099. In addition, a lunar calendar is displayed beside the solar calendar at the same screen for your reference. You can also view the relevant data in Commemoration and Schedule.

Enter "Calendar".


Press   to view the previous or next month.



 
Press     to choose a certain date.

*** Jan. 2002 ***						
日	一	二	三	四	五	六
		1	2	3	4	5
6	7	8	9	10	11	12
13	14	15	16	17	18	19
20	21	22	23	24	25	26
27	28	29	30	31		

辛巳年
11月18日

 


Press  to enter function mode.

 
Press the numeric key or press   and  to perform corresponding function.

[Function]
1.Date Search
2.Quarterly

Choose "Date Search".

Input the date and press  to view the calendar.

Choose "Quarterly".

Press  to view the Calendar quarterly.

Dec. 2001	Jan. 2002	Feb. 2002
SMTWTFS	S M T W T F S	SMTWTFS
3 4 5 6 7 8	1 2 3 4 5	1 2
9 10 11 12 13 14 15	6 7 8 9 10 11 12	3 4 5 6 7 8 9
16 17 18 19 20 21 22	13 14 15 16 17 18 19	10 11 12 13 14 15 16
23 24 25 26 27 28 29	20 21 22 23 24 25 26	17 18 19 20 21 22 23
30 31	27 28 29 30 31	24 25 26 27 28

Note: The date that you inputted in "Date Search" will be displayed in the specific quarter.

The date with a mark "+" at upper right corner there is Schedule record on that date;


the date with a mark "-" at the lower right corner there is Commemoration record on

that date. Press     to highlight the marked date, and press  to view the

relevant record. If there are records of Schedule and Commemoration on a certain date, [MD7900 User Manual]

*** Jan. 2002 ***						
日	一	二	三	四	五	六
		1	2	3	4	5+
6	7	8	9	10	11	12
13	14	15	16	17	18	19
20	21	22	23	24	25	26
27	28	29	30	31		

辛巳年
11月18日



indicates

indicates

[Jump To]
1.Commemoration
2.Schedule

you

should press   and  to view

“Schedule” or “Commemoration” record.

3.8 Commemoration

You can input commemorative date and contents, which can be marked in Calendar.

3.8.1 Inputting Data

Enter “Commemoration”.

 
Press the numeric key to choose Solar or Lunar Commemoration.



e.g. choose “Lunar Commemoration”.

Input the date and contents and then press 

to save.

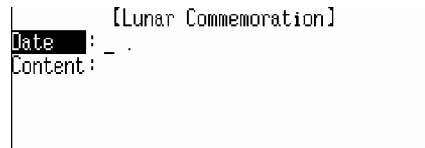

(You must input data in both of the fields.)

Note: About inputting data, please refer to “3.1.1 Inputting Data” for details.

3.8.2 Searching Data

Note: Please refer to “3.4.2 Searching Data” for details.

3.8.3. Editing and Deleting Data

Note: Please refer to “3.2.3 Editing and Deleting Data” for details.

 
3.9 Scheduler



Including daily and weekly scheduler, it shows the Schedule, To Do List and Commemoration data as well, so that you can search and view data quickly.


3.9.1 Inputting Data

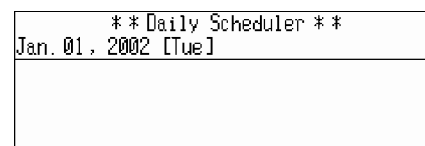

 
Enter “Schedule”.

[MD7900 User Manual]



Press   to view the previous or next date record.



 
Press  to enter function mode.

Press the numeric key or press   and  to perform corresponding function.

```

[Function]
1.Weekly Scheduler
2.Date Search
3.New
4.Edit
    
```

Choose “New” to create a new record.

Press   and  to enter the relevant mode.

```



[Create in]
1.Schedule
2.To Do List
3.Commemoration
    
```

input

Note: About inputting data, please refer to the relevant parts in “Schedule”, “To Do List” and “Commemoration” for details.)



3.9.2 Searching Data

 
Press  and choose “Daily Scheduler”.


Press   to turn page to view the records of different date.



```

** Daily Scheduler **
Nov. 16, 2001 [Fri]
S 12:00AM ~ 3:00AM go to meet mrs.ma
S 8:00AM ~11:45AM go to school.
T [1] go to meet an old friend.
    
```

Press   to view the previous/next record of the same date.



 
Choose a record and press  to view.

Press  and choose “Weekly Scheduler”.

Press   to view the records of the previous or next week.

```

** Weekly Scheduler **
Nov. 11~17 2001 [45 / 52 ]
11S 12M 13T 14W 15T 16F 17S
   S1   T1   C1   S2   S1
          T1   T1
    
```

Press   to select a desired date, then press  to view the records of the date.

Note: “S”, “T” and “C” represent the records of “Schedule”, “To Do List” and “Commemoration” respectively; the number beside the letter represents the total amount of the records.

Press **功能** and choose “Date Search”.

Input the desired date and press **輸入** to search.

[Date Search]	
Date :	_1. 1. 2002

3.9.3 Editing Data

Press **功能** and choose “Edit” to edit the record.

3.10 Schedule Class

With the two choices of Day Class Schedule and Night Class Schedule, you can input, edit, search, view and delete data at any time.

3.10.1 Inputting Data

Enter “Schedule Class”.

Press **DEL** **INS** to select a period.

Press **▲** **▼** to select the weekday.

Select a field and press **輸入** or **編輯** to go to the input mode. (You may also press **功能** and choose “Edit” to enter input mode.)

Input data and press **輸入** to save.

	m1	m2	m3	m4	a1	a2	a3	a4	e1	e2	e3	e4
SU	*											
MO												
TU												
WE												
TH												
FR												
SA												

Note: 1. Press **A** and **P** for AM and PM time format respectively.

2. About inputting data, please refer to “3.1.1 Inputting Data” for details.

3.10.2 Searching Data

Enter "Schedule Class".

Press to choose one field with "*" and press to view.

	m1	m2	m3	m4	a1	a2	a3	a4	e1	e2	e3	e4
SU	*								*			*
MO	*		*				*					
TU		*									*	*
WE					*				*			
TH												
FR			*									
SA									*			

Press to view the previous or next

Press to scroll the content by line.

[Schedule Class] record.
 Course : English
 Time : 7:45AM - 9:45AM
 Teacher : bob
 Location: 501

In index mode or view mode, press .

Press the numeric key or press and

to perform corresponding function.

[Function]
 1.Edit
 2.Del
 3.Weekday Search
 4.Course Name Search

Choose "Weekday Search".

Press to view the records of different

Press to select a record and then press view the details.

[MONDAY]
 m1:english 7:45AM- 9:45AM
 m3:chinese 9:45AM-11:45AM
 a3:english 6:00AM- 8:00AM
 weekday.
 to

Choose "Course Name Search".

Input the keyword and press to search.

Please input keyword :

3.10.3 Editing and Deleting Data

In index mode or view mode, press

and then choose "Edit" to edit the data.

You may also press + to edit data.

In view mode, press and choose

"Del" to delete the record. You may also press

+ to delete record.

Press to abort.

Press to confirm.

[MD7900 User Manual]

[Function]
 1.Edit
 Delete this record?
 Y / N
 4.Course Name Search

Chapter 4 Calculation

 
4.1 Simple Calculator

It includes the main functions of a calculator, including basic calculations, square, square root and percentage calculation.

Enter Simple Calculator.

 
Input the numbers to perform calculation.

Press $\left[\frac{C/CE}{\text{退出}} \right]$ to clear the inputted number.

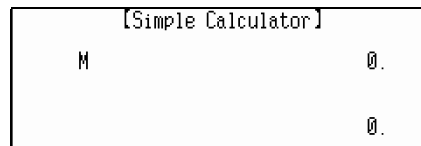

e.g. calculate $126 + 12 = ?$.

Input "126", press $\left[\frac{T}{+} \right]$ (i.e. "+"), input "12", then press $\left[\frac{=}{\text{輸入}} \right]$ (i.e. "=") to get: $126 + 12 = 138$.

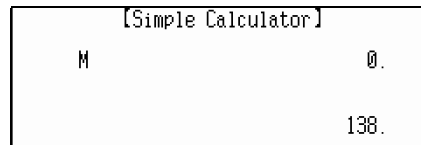

 
Press $\left[\frac{C/CE}{\text{退出}} \right]$ to clear the number.

e.g. calculate $200 \times 10\% = ?$.

Input "200", press $\left[\frac{U}{\times} \right]$ (i.e. "×"), input "10",

(i.e. "%"), then $\left[\frac{=}{\text{ENTER}} \right]$ to get: $200 \times 10\% = 20$

Press $\left[\frac{C/CE}{\text{退出}} \right]$ to clear the number.

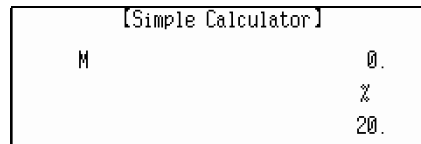

 
press $\left[\frac{O}{\%} \right]$

Press $\left[\frac{R}{M+} \right]$ (i.e. "M+") to memorize the calculated result;

Press $\left[\frac{E}{M-} \right]$ (i.e. "M-") to subtract the numbers memory;

Press $\left[\frac{W}{MR} \right]$ (i.e. "MR") to display the memorized numbers;

 
Press $\left[\frac{Q}{MC} \right]$ (i.e. "MC") to clear the memorized number.

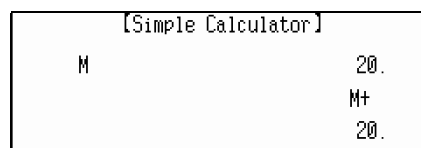

from

e.g. calculate $\bullet 81 = ?$.

Input "81", press $\left[\frac{N}{\bullet} \right]$ (i.e. "•") to get: $\bullet 81 = 9$

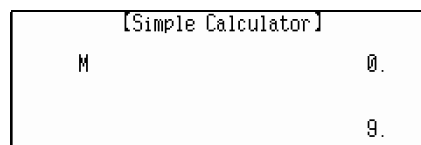 


e.g. calculate the multiples of 3.

Input "3", press **U** (i.e. "X"), press **↵** (i.e. "=") to get: $3 \times 3 = 9$.

Press **↵** (i.e. "=") again to get $3 \times 3 \times 3 = 27$;

Press **↵** successively to get the multiples of 3.

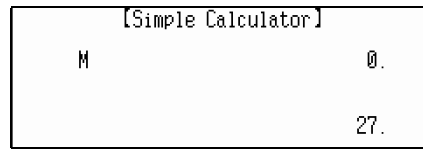

 
4.2 Scientific Calculator

Besides simple calculations, various functions are also included.

Enter Scientific Calculator.

 
Input the numbers to perform the relevant Calculation.

Press **C/CE** (退出) to clear the inputted number.

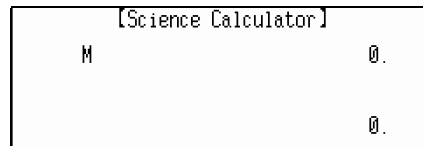

e.g. calculate $786 + 269 = ?$.

Input "786" (10 digits can be inputted), press **T** (i.e. "+"), input "269", then press **↵** (i.e. "=") to get: $786 + 269 = 1055$.

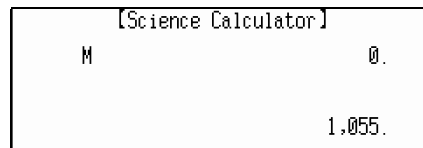 


Press **R** (i.e. "M+") to memorize the calculated result;

Press **E** (i.e. "M-") to subtract the numbers memory;

Press **W** (i.e. "MR") to display the memorized numbers;

Press **Q** (i.e. "MC") to clear the memorized number.

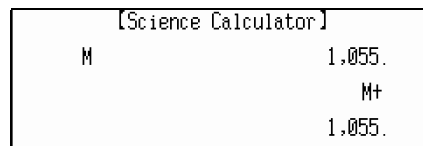

from

 
4.3 Currency Conversion

It stores 25 different currencies for conversion. Set the exchange rate first so as to perform two-way conversion. You can also set up three other currencies to perform two-way conversion.

Enter "Currency Conversion".

Press **▲** **▼** and **↵** or press numeric

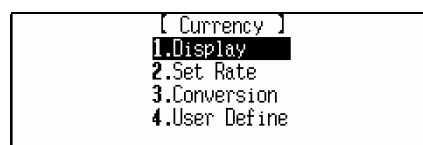

[MD7900 User Manual]





key directly to select an item.

Display

Choose "Display"

Press   to scroll the content by line.


 
 
Press   to scroll the content by page.

Press  to exit.

Australia AUD	1
Austria ATS	1
Belgium BEF	1
Britain GBP	1
Canada CAD	1
China CNY	1

Set Rate

 
Choose "Set Rate".


Press   to select the currency, input the rate, then press  to save.

[Australia AUD]

1.

exchange

e.g. choose "China CNY", and input "8.26".
then press  to save. (Set rates of other currencies by the same way.)



Press  to clear the inputted number.


 
[China CNY]

8.26

Conversion

Choose "Conversion".

Press   to highlight the upper or lower field.

Press   to select the currency.

e.g. choose "China CNY" and "US USD" to convert.

Select either of them as the basic currency, then input the number.

[Currency]

 
[China CNY]

 
0.

[US USD]

0.

e.g. input "4,000" China CNY.

Press  to figure out the value of USD.

Press  to clear the inputted number for recalculation.

[Currency]

[China CNY]

4,000.



 
[US USD]

 
484.26150121

 
User Define


Choose "User Define" to define a currency.

 
Press the numeric key directly or press

  and  to select an item.

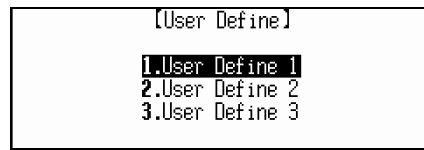

e.g. choose "User Define 1", input the currency name "Dinar" and press  to save.

Press  to exit.

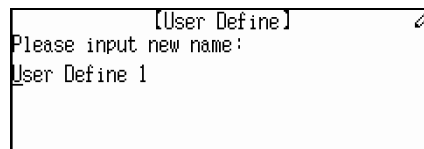



4.4 Unit Conversion

It provides various common units, such as Length, Area, Volume, etc. Two-way conversion is available for all units.

Enter Unit Conversion.

Press the relevant numeric key or press



  and  to select an item.

 
Press   to scroll the list by page.



e.g. choose "Length".

 
Press   to highlight the upper or lower field.

Press   to select the unit.

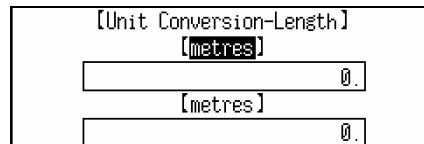


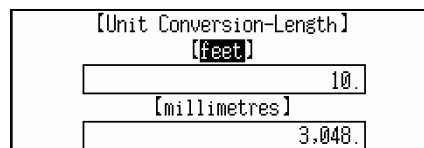 
e.g. convert "10 feet = ? mm".

Highlight "foot", and input "10".

Press  to get the result:

10 feet = 3,048 mm

Press  to clear the inputted number for recalculating.

 




 
4.5 Size Equivalent

It lists out different sizes of the shirt and shoes for male and female in various regions for your reference.

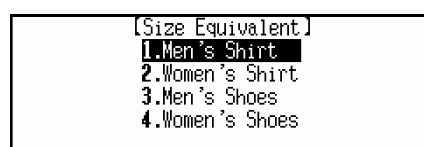

Enter "Size Equivalent".



[MD7900 User Manual]




 

Press the numeric key directly or press   and  to select an item.

e.g. choose "Women's Shoes".

Press   to scroll the content left and right.

Press   to scroll the content by line.

Press   to scroll the content by page.

 
Press   to exit.

[Women's Shoes]				
U.S.A. :	4	4.5	5	5.5
Britain :	2.5	3	3.5	4
Europe :	34.5	35	35.5	36
Japan :	21.5	22	22.5	23


4.6 Financial Management

It helps user to deal with different kinds of accounts which includes the balance, transaction, credit, debit, etc., user can also edit and delete data while browsing.

 
Enter "Financial Management".

Input data, press  to save.

e.g. Input the Account No. "123-456".


Press  and input "3000" in "Balance",



(Up to 12 digits can be inputted.) then press

 to save. (The data can be only saved

 
after inputting the Account No., up to 10 records can be saved.)

[Financial Management]	
Account No. :	-
Balance :	0.00


Note: Press  to select "Renew Record" or "Save Record" to perform the relevant function.


Press   to view the Account No. one by one.


 
Press   to view the Account No. by

Press  to view the details of the selected

Press   to view the previous or next

Press  to enter the Function Mode.

Press the numeric key directly or press 

 and  to perform the relevant

New, Edit and Delete

Choose "New" to create a new record.

Choose "Edit" or "Del" to edit or delete the record.

[Account No.]	
123-456	
325-4688	
321-6688	
123-689	
880-123	

 

 


page.

one.

records.


[Financial Management]	
Account No. :	123-456
Balance :	3,000.00
Functions 1.New 2.Edit 3.Del 4.Transfer 5.Report	

function.

Note: Press  to create a new record, press  +  to edit the record, press  +  to delete the record.

Transfer

 
Choose "Transfer".


Input the transfer date "2001. 08. 15", press 



[Transfer]	
Date:	1. 1. 2002
Credit/Debit:	0.



 to

 
choose "Credit" or "Debit", then input transfer number "4,000".

Press  to save the inputted data.

Note: Press  to select "Renew Record" or "Save Record" to perform the relevant function.

Press   to view the Account No. one by

Press   to view the Account No. by


Press  to view the details of

 

 
[Transfer]	
2. 01. 2001	
. 2001	
. 2002	

 

one.

page.

the selected one.

Press  to select "New", "Edit" or "Del" to perform the relevant function.

Note: Press  to create a new record, press  +  to edit the record, press

 +  to delete the record.

Choose "Report" to view the content.

Press  to select "Credit" or "Debit" to view

Press  to exit.

Account No :	123-456
Previous Balance :	3000
Total Credit :	4000
Total Debit :	2000
Next Balance :	5000

the content.

4.7 Loan Interest



 
User can calculate the capital, annual interest rate, total interest and monthly payment of a certain

period. You can also quickly look up the amount paid and loan left by a certain period

of time.

Enter "Loan Interest".

[Loan Interest]	
Start (Yr./Mo.) :	[2002/ 1]
Mortgage :	[0]
Annual Int. Rate :	[0 %]
Loan Period :	[0 Yr.]

Press   or  to select the input field. (The unit cannot calculate if input data is not enough.)

 
e.g. input the following data:

Start (Yr./Mo.): [1999/08]

Loan : [40000]

Annual Int. Rate: [6%]


 
 
Loan Period: [5Y]

Press  to get the result.

[Loan Interest]
Start (Yr./Mo.) : [1999/ 8]
Mortgage : [40000]
Annual Int. Rate : [6 %]
Loan Period : [5 Yr.]

invalid or

 
 
[Result]
Monthly Payment : 773.312061178
Total Interest : 6398.72367068

Note: When inputting data, press  to select "Renew Data" or "Calculate" to perform the relevant function. Press  to input new data. Press  to clear the inputted data.

Renew Data

Press  to enter function mode.

Choose "Renew Record" to renew all the


 
  to input new data.)

[Function]
1.Renew Record
2.Inquire
3.Edit

data.(Press

Edit

Choose "Edit" to edit the data (You can also

press  +  to edit the data).

Inquire


Choose "Inquire" to look up the amount paid and loan left by a certain period of time.

[Loan Inquiry]
Inquire (Yr./Mo.) : 2002/ 1
Interest Paid :
Principal Paid :
Total Amt. Paid :

e.g. to inquire loan return by August, 2001.

Input "2001/8", press  to calculate.

Press  to view the remain loan.

Press  and choose "Inquire" to input new Year/Month to start loan inquiry.



 
Press  to exit.

 
[Loan Inquiry]
Inquire (Yr./Mo.) : 2001/ 8
Interest Paid : 4106.14055585
Principal Paid : 15226.6609735
Total Amt. Paid : 19332.8015294
[Loan Inquiry]
Inquire (Yr./Mo.) : 2001/ 8
(Loan Left)
Principal : 24773.3390264
Amount : 27065.9221412

4.8 Mathematical Formulae



This function provides user with mathematics formulae on different subjects for your reference.



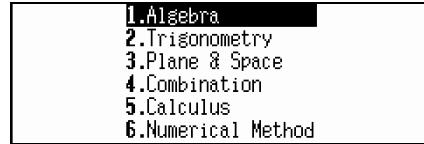Enter "Mathematics Formula".

Press the numeric key directly or press  and  and  to select an item.



e.g. choose "Trigonometry"



Press   to search the item one by one.



Press   to scroll the list by page.

 
Press  to view the chosen one.

 


e.g. choose "Double Angles".

Press   to scroll the content by line.

Press   to scroll the content by page.

Press  to exit.

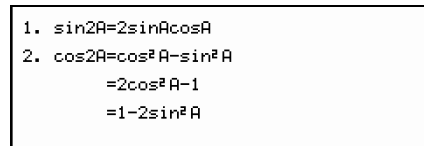 



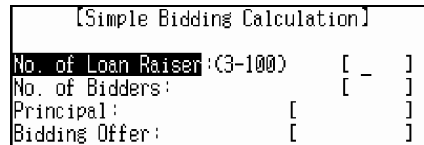 
4.9 Simple Loan-bidding

Simple Bidding Calculation can calculate the total gain and annual interest rate

of the bidding.

Input the data, press  to get the result.

After inputting an item, press  or  to move cursor to the next input field.



 
e.g. input the following data:

 
No. of Loan Raiser: 80


 
No. of the Bidders: 60


Principal: 500000


Bidding Offer: 360800


 
Press  to get the result.

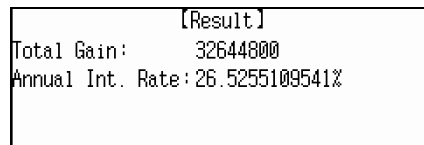

Note: When inputting data, press  to select "Renew Data" or "Calculate" to perform the relevant function. press  to clear the inputted data.

 
Press  to enter the Function Mode.

Press the numeric key directly or press 

 and  to choose an item.

Choose "Edit" to edit the data.

Choose "Renew Data" to input new data.

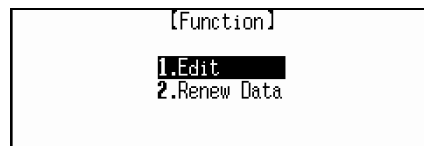

Press $\left[\begin{smallmatrix} C/CE \\ \text{退出} \end{smallmatrix} \right]$ to exit.

4.10 Complex Loan-bidding

Complex Bidding Calculation can calculate the total gain, annual interest rate, total Offer and return rate of the bidding.

Press $\left[\begin{smallmatrix} \leftarrow \\ \text{DEL} \end{smallmatrix} \right]$ $\left[\begin{smallmatrix} \rightarrow \\ \text{INS} \end{smallmatrix} \right]$ to choose "Internal" or "External".

```
Bidding:Complex Internal/External
No. of Loan Raiser:(3-100) [ 0 ]
Principal: [ 0.]
Bidding Offer:(Press ENTER)
```

Press $\left[\begin{smallmatrix} \rightarrow \\ \text{輸入} \end{smallmatrix} \right]$ to move cursor to the next input field.

Input the No. of Loan Raiser "5" and Principal "10000", then input Bidding Offer of each time e.g. input the Bidding Offer "1000" at the second time, "2000" at the third time, "3000" at time...

```
Bidding:Complex Internal/External
No. Input the Bidding Offer
Pr 2 nd Time: [ - 0. ]
Bi 3 rd Time: [ - 0. ]
4 th Time: [ - 0. ]
```

one by one.
the fourth

Press $\left[\begin{smallmatrix} \rightarrow \\ \text{輸入} \end{smallmatrix} \right]$ to confirm after inputting.

Press $\left[\begin{smallmatrix} \text{功能} \end{smallmatrix} \right]$ to enter the Function Mode

Press the numeric key directly or press $\left[\begin{smallmatrix} \uparrow \end{smallmatrix} \right]$

$\left[\begin{smallmatrix} \downarrow \end{smallmatrix} \right]$ and $\left[\begin{smallmatrix} \rightarrow \\ \text{輸入} \end{smallmatrix} \right]$ or to select an item.

```
[Function]
1.Renew Data
2.Calculate
```

Choose "Renew Data" to input new data.

```
[Function]
1.Renew Data
```

Choose "Calculate" to inquire one of the calculations.

```
Bidding:Complex Internal/External
No. of Loa Calculate [ 5 ]
Principal: [ 00 ]
Bidding Of 0. times
```

e.g. input to inquire the third time.

Input "3", press $\left[\begin{smallmatrix} \rightarrow \\ \text{輸入} \end{smallmatrix} \right]$ to calculate the total gain, annual interest rate, total offer and return rate of the third time.





 
```
[ 3rd Time ]
Total Gain: 36000
Annual Int. Rate: 133.333333333%
Total Offer: 39000
Return Rate: -7.6923076923%
```

Press $\left[\begin{smallmatrix} C/CE \\ \text{退出} \end{smallmatrix} \right]$ to exit.

Chapter 5 Others

5.1 Games

Ten fascinating games are collected in this function, which are Brick Game, Apple Chess, Snake, Shooting, Riddle, 5-Tile, Hangman, Puzzle Pipes and Mine.

 
Press numeric key directly or press  
  and  to choose a game.





Note: If the game is locked by password set in “Game Lock”, you must input correct password before entering Games.

 
5.1.1 Brick Game

 



Choose “Brick Game”.

 
Press  to enter the game.



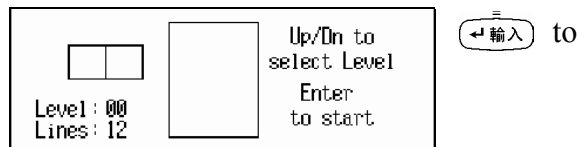

Press   to select a level, and press start the game.



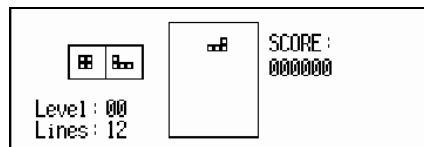


Press  to rotate the brick, press  to move the brick leftward, press  to move the brick rightward, press  to drop the bricks directly.



When a line is filled with the bricks, it will disappear completely, meanwhile the scores will be added automatically which is shown at the right top of the screen. Lines indicates the number of lines required to be filled in one-run.

Press  to pause the game, and press  again to resume the game.

 
Press   to change the falling speed of the bricks.



 
Press  to choose “New Game” to restart the game.

As soon as no more bricks can fall down, “Game Over” will appear.



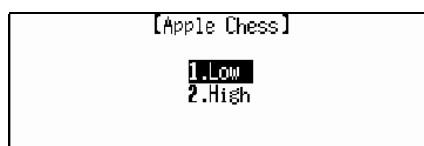

5.1.2 Apple Chess

 
Choose “Apple Chess”.



Press the numeric key directly or press   and  to select a level.



e.g. choose “Low”.

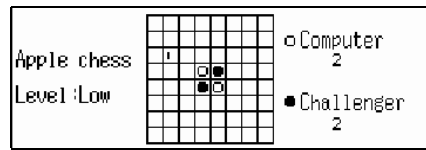 
Press     to move the cursor and game.



start the

Games Rules:

-  Computer
-  You

 
The chess will be submitted to the opponent, if it is trapped by opponent’s chess in traverse, longitudinal or oblique. While confronting, if player shifts the cursor before pressing  but fail to raid the chess possessed by computer or the motion cursor is located in the checked frame that’s fed up with chess, the computer indicates the sign “Invalid key”. When it’s nowhere for you to place the chess, “By Computer” will appear, so computer will take its turn. If it’s nowhere to place the chess for computer, you will be suggested as “By You”. While the chessboard is fully occupied, the party who has more chess is the winner.

 
Press  to exit.


5.1.3 Snake

 
Choose “Snake”.

Press the numeric key directly or press   and  to select a level.

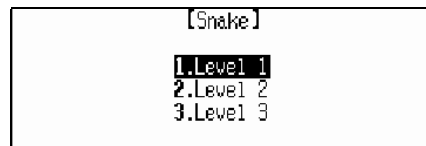



Press  to start the game.

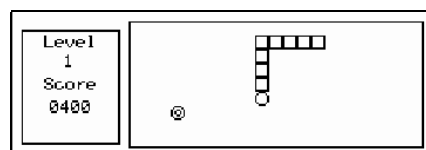Press     to move the snake head to capture food.



Games rules:

 
-  Represents food.

When the snake head captures a grain of food, automatically the accumulative scores add 100, meantime the snake body is elongated by one-segment; press  to pause the game, press  again to go on. As soon as the snake head touch its body or the fence-ridge, “Game Over!” will appear. When your score up to 5,000, you’ll see “Congratulations!”, and the game access to the next level automatically. The snake body here moves faster than that does at the first level, so does at the third level.


Press  to exit.

5.1.4 Shooting

 
[MD7900 User Manual]

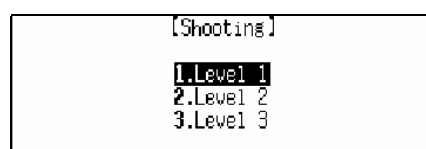


 
Choose "Shooting".



Press the numeric key directly or press 

 
 and  to select a level.

Press  to start the game.

Press   to move the machine gun, and

 to shoot.

Press  to pause the game, and press  to resume the game.

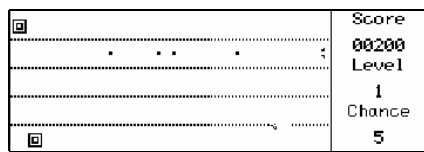

press

again to

When shoot the bomb or target, the system adds scores automatically. Score is shown on the upper right corner, level is shown in the middle, and chance is shown at the lower right corner. (When the gun touches a bomb or a target, the number of chances is deducted automatically.)

"Game Over!" will appear when 5 chances are used up, then the result appears automatically.

 
Provided the specific scores have been achieved, then goes to the next level at which the target and bomb move faster than the last level.

When you win the level 3 smoothly, "Congratulations!" will appear for a few seconds and show the result automatically.

 
5.1.5 Riddle

Choose "Riddle".

Press   to view the previous or next

Press  to view the result.

Press  to exit.

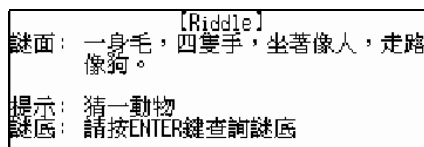

 


riddle.



 
5.1.6 5-Tile

 
 
The player who can place 5 consecutive pieces in a line first will be the winner.

 
Choose "5-Tile".




 
 
 
Press the numeric key directly or press   and  to choose "Single or "Double".

 
e.g. choose "Single".

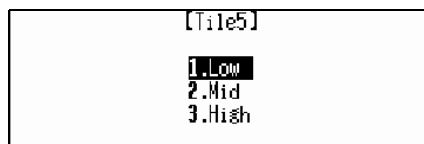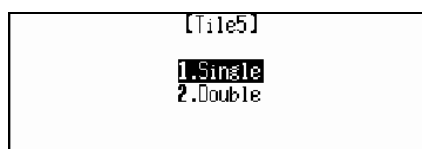Press the numeric key directly or press   and  to select a level.



Press  to start the game.

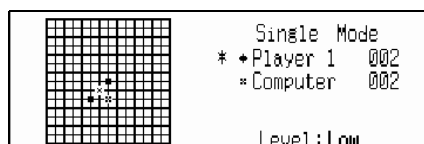

 
Press     to move the cursor, then press  to place a checker; press  to undo one step.

 


 
Press  to exit.

 
5.1.7 Hangman

Choose “Hangman”.

Press the numeric key directly or press 
 and  to select a level.

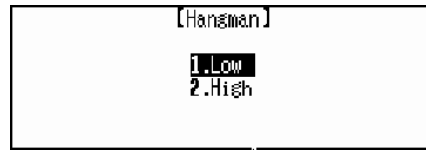 



Guess and input the word according to the pronunciation of the word by pressing . The number of black boxes displayed in the bar indicates the amount of the letters of the word).

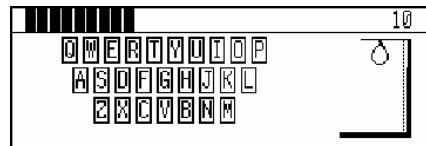 


guessing

 
If correct word is inputted within 10 chances, the display “Right!”; otherwise “Wrong!” will appear, result will be displayed automatically.

Press  to view the result.

Press  to exit.

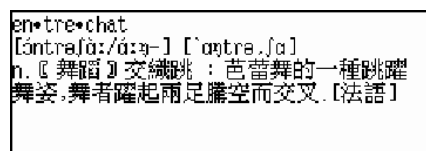

 


 
screen will then the

Note: If the inputted letter is a part of the word, the black box(es) at the guessing bar will be discovered. When you input a wrong letter or press  to listen to its pronunciation, one chance will be deducted. You will fail if you cannot guess the correct word within 10 chances.





5.1.8 Puzzle

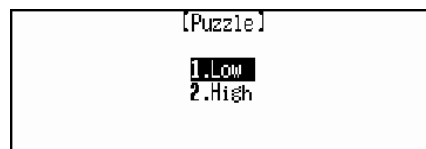Choose “Puzzle”.

 
Press the numeric key directly or press 
 and  to select a level.

 


e.g. choose “Low”.

 
Press  to move the number squares to line them up in sequential order.

(Note: There are eight numbers 1-8 in the game at low level, and fifteen numbers 1-15 at high level.)

While playing the game, press  to start another round of

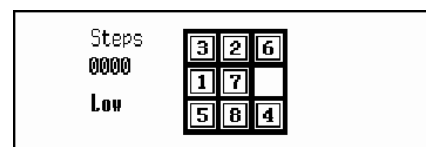







 


 
the same level.

 
 
Press  to exit.


5.1.9 Pipes

Choose “Pipes”.



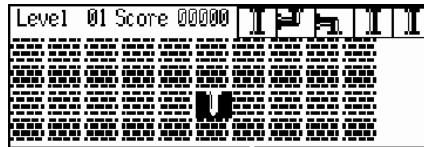 
Press   to select a level, and press   to confirm, then press     to highlight the desired brick, and press  to connect the pipes.



Press  to pause the game, and press  again to resume the game.



Press  to exit.

 
Games Rules:

There are 3 levels in this game, 5 sub-levels in level 1, and you must pass the 5 sub-levels before entering level 2. In the first sub-level, you should make the water flow through 20 pipes, otherwise, you will lose a chance; and after the water flowing 24 pipes you will enter Level 2. Like Level 1, the water should flow through 24-29 pipes before you can pass the relevant sub-levels to enter Level 3. In Level 3, there is no sub-levels, if the water cannot flow through 30 pipes you will lose a chance, and you can play the game continuously until the game is over when 3 chances are used up. There are 5 pipes that shown on the screen as hints. Press   to highlight bricks and , the first pipe from the left will be displayed, then the other pipes will be displayed randomly. Once the water flows through a pipe, you will get 50 points. Highlight any pipe with no water in it can change its shape, but 50 points will be deducted every time.





 
 
 
5.1.10 Mine

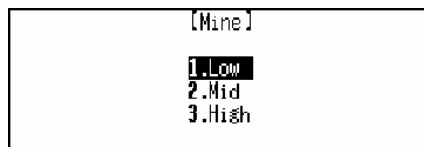 
Choose “Mine”.

Press the numeric key directly or press   and  to select a level.







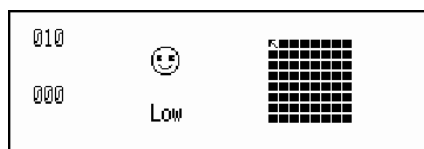 
e.g. choose “Low”.

Press     to move the cursor to highlight the desired square and press  to open it; if you think there is a mine hidden in the square, press  to mark it and press  again to unmark it.

 


Press  to exit.

You will win if you can mark all of the squares with mines within 999 seconds.

Press     to move the cursor to highlight a square, press  to open it, if there

is a mine, it will explode and game is over; if there is a number (1-8), the number indicates how many mines are spread in the eight adjacent squares around this one, from which you can judge the way the mines are distributed.



 
When a game is over, press  to restart.

 
5.2 Travel Guide

It provides information as follows: names of airlines & airports, average temperature of different region, general information of major cities of the world, and travel reference.



Enter “Travel Guide”.


Press the numeric key directly or press

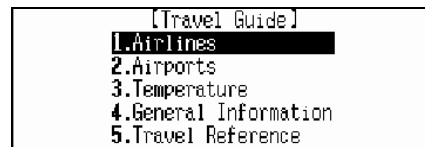  and  to select an item in the menu of Travel Guide.




e.g. choose “Airlines”.




Press   to scroll the content by line.

 to scroll the content by page.



Press 





If choose “Airports”, press the numeric key

 
press   and  to select any one of five continents.



directly or





e.g. choose “Europe”.

Press   or   to scroll the content by line or by page.

Press  to exit.



e.g. choose “France”.

Press   or   to scroll the content by line or by page.



Press  to exit.



 
5.3 Telephone Information

It provides five continental telephone information for you to make international telephone call conveniently.

Enter “Telephone Information”.

Press the number key directly or press  
 [MD7900 User Manual]



and 

to select a continent.

e.g. choose “Europe”.

Press to select any country or district from the list.

Press to scroll the list.

 
Press to view the information of the selected country or district.



 
e.g. choose “Spain”.

Press to scroll the content by line.

Press to exit.

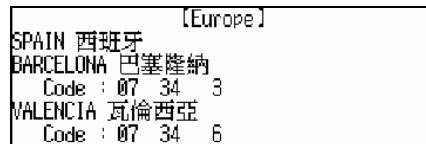

Press to choose “Search by name” or “Search by code”.

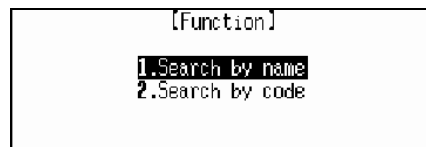 


Search by name

Choose “Search by name”, input the name and to view the details.

Search by code

Choose “Search by code”, input the code and press to view the details.

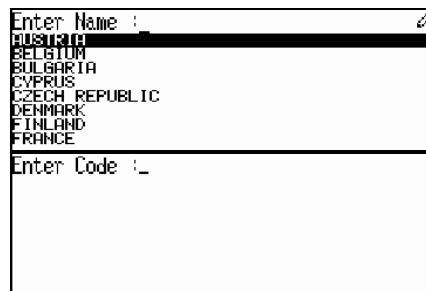

 
press

5.4 English Name

It provides you with English names and it's Chinese translation of male and female.

Enter “English Name”.

Press the numeric key or press and select “Male” or “Female”.

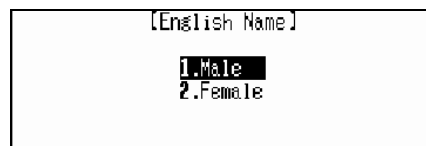

or to

e.g. choose “Female”.

Press to scroll the content by line.

to scroll the content by page. You may also Chinese name directly.




Press input

e.g. input “•••” and press .

Press to scroll the content by line.



Press

 
 
 to view the previous or next name.

 
Press  to exit.

5.5 Memory Check

You can check the memory capacity (in percentage) left for use.

Enter “Memory Check”.

Press  or  to exit.

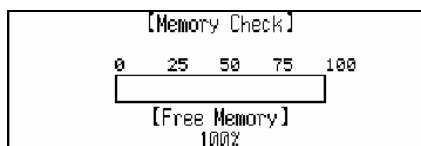 


5.6 PC SYNC

This unit can be connected to a computer and transmit data with each other conveniently and efficiently.

Make sure transmitting wires are properly connected before transmitting.


Press  to exit.


 
Press  to start transmitting data.

 
5.7 Data Deletion

The unit can delete the following data for once: Tel, Memo, To Do List, Schedule, Schedule Class, Solar Comm., Lunar Comm., Financial Management, Personal Information, E-C User’s Dictionary, C-E User’s Dictionary, E-E User’s Dictionary, Oxford Revision, Chi-Eng Revision. In addition, “Marked Records” can delete all the marked records, “Delete All” will delete all unmarked records.

Enter “Data Deletion”.

Press the numeric key directly or press 

 
 and  to select an item.

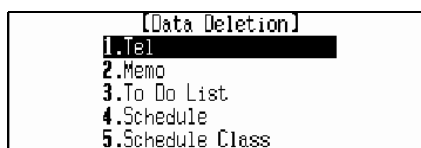

e.g. choose “Schedule”.

Press  to confirm deletion.

Press  to abort.

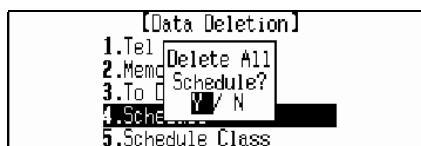

- Note:**
1. Only the unlocked records in Tel, Memo, To Do List, Schedule, Schedule Class, Solar Comm., Lunar Comm., Personal Information can be deleted.
 2. All the records in Financial Management, E-C User’s Dict., C-E User’s Dict., E-E User’s Dict. Oxford Revision and Chi-Eng Revision can be deleted.
 3. “Marked Records” can delete all the marked records. (Including password,



but you should input correct password first)

 
4. "Delete All" can delete all the unmarked records.

 
5.8 System Setting

A series of settings can be made in this function, which will make this product more suitable to your operational needs.

Enter "System Setting".

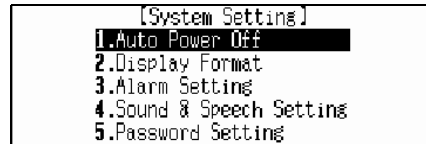

Press numeric key directly or press   to select an item.




and 

 
5.8.1 Auto Power Off

Enter "Auto Power OFF".

Press   to adjust the auto power off period.

Press  to confirm.

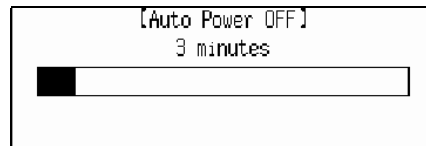

Press  to abort.



 
Note: You can set auto power off period from 0 to 30 minutes, the default time is 3 minutes. It will switch off automatically when no key has been pressed within the auto power off period. If you set the period to 0, the auto power off will be out of function.

5.8.2 Display Format

Enter "Display Format".

Press the numeric key or press   and set time display format or date display format.

Press  to exit.

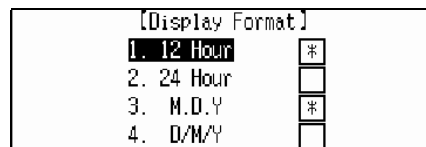

 to

Note: In English display mode, if "M.D.Y" is selected, then the date will be displayed in the format "DD.MM.YYYY"; if "D/M/Y" is selected, then the date will be displayed in the format "DD/MM/YYYY".

5.8.3 Alarm Setting

 
Enter "Alarm Setting".

Press numeric key to input time, then press

, and then press   to choose On or Off.

Press  to confirm.

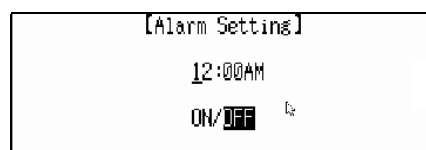

Press  to exit.

 


Note: If set alarm on, the alarm will function upon the time even if the unit is power-off.





5.8.4 Sound & Speech Setting

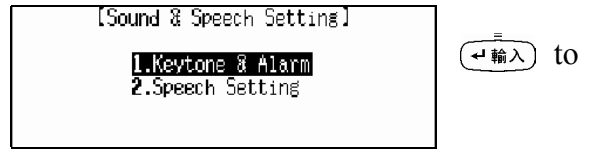Enter “Sound & Speech Setting”.


Press the numeric key or press   and select an item.

 


Choose “Keytone & Alarm”.

Press   to select “Keytone” or then press   to choose “On” or “Off”.



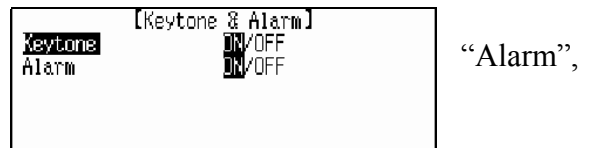

Press  to confirm.

Press  to exit.



 
Note: The default setting is Off, but if you set alarm on in other applications, the alarm sound will be turned on automatically; if the alarm sound is set off, the unit will be power-on upon the alarm time, but the alarm will not function.

Choose “Speech Setting”.

Press   to select “speed” or “Frequency”, then press   to adjust.

Press  to confirm.

Press  to exit.

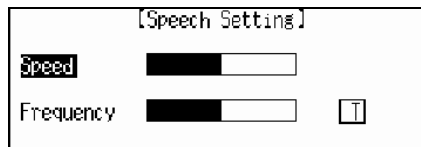 


 
5.8.5 Password Setting

Password is composed of 1-8 digital numbers or English letters, the marked records can be locked only when the password is set on. The locked data cannot be viewed unless the password is cleared or closed.

Enter “Password Setting”.

Input password, press  and input the again, then press  to confirm.

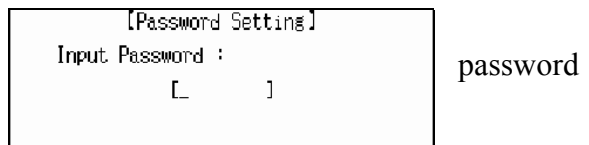

To clear the password, first enter Password Setting, and select “Clear Password”. Input the correct password, then press  to confirm, and the password will be cleared; if select “Password Off”, the password will be closed.

If you would like to set password on, enter Password Setting, and choose “Password On”, the password will be turned on.

Note: If you forget the password, please take the unit to the local customer service center, the staff will clear the Password for you.

5.8.6 Game Lock



 
Set personal password for games. Password is composed of 1-8 digital numbers or English letters, the marked games can be locked only when the password is set on. You can not enter games unless the password is cleared or closed.

Note: Please refer to “5.8.5 Password setting” for details.

5.9 Display Setting

English display and Regular/Simple Chinese display are available.

Enter “Display Setting”.

 
Press   to move the cursor to select display language and press  to confirm.



desired





Note: 1. When a display format is set, the original display format will change to the new one automatically.

 

2. In English display format, all the display modes will be displayed in English.

 
Press  to switch to Chinese display format.


 
5.10 Brief of Function

It provides you with introductions of all kinds of major functions.

Press   or   to scroll the content by line or by page.

Press  or  to exit.

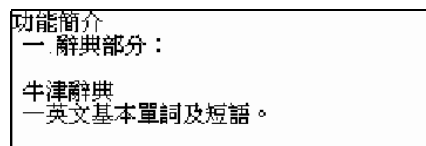

Note: In each function mode, you can press  +  to get detailed introduction of the relevant function.

Chapter 6 Appendix

6.1 Chart of Cangjie Input Method

哲理類		筆劃類		人體類		字形類		
日	☐	竹	ノ 厶	人	レ 彡	尸	冂 冂 冂 冂	冂 冂 冂 冂
	A	斜	H		O	側	S	
月	冂 冂 冂 冂	戈	、 ム 冂	心	匕 匕 冂 冂	廿	卅 卅 卅 卅	卅 卅 卅 卅
	B	點	I		P	並	T	
金	ノ 八 儿	十	一	手	丰 丰 丰	山	冂 冂 冂	冂 冂 冂
	C	交	J		Q	仰	U	
木	寸 ㇇ 冂	大	又 大 冂	口		女	く 冂 此 冂	冂 冂 冂 冂
	D	又	K		R	紐	V	
水	又	中	丨 巾 冂	難字	重字	田	冂 冂 冂	冂 冂 冂
彳	E	縱	L		X	方	W	
火	灬 灬 小 小	一	エ 冂 冂	造字	片語	卜	一 冂 冂 冂	冂 冂 冂 冂
灬	F	橫	M		Z	卜	Y	
土	土	弓	丿 冂 冂 冂					
土	G	鈎	N					

6.2 Chart of Wang Ma 5-strokes Input Method

	i 一 衣	u ㄨ 烏	ü ㄩ 迂
a ㄚ 啊	ia 一ㄚ 呀	ua ㄨㄚ 蛙	
o ㄛ 喔		uo ㄨㄛ 窩	
e ㄜ 鵝	i 一ㄝ 耶		üe ㄩㄝ 約
ai ㄞ 哀		uai ㄨㄞ 歪	
ei ㄟ 欸		uei ㄨㄟ 威	
ao ㄠ 熬	iao 一ㄠ 腰		
ou ㄡ 歐	iou 一ㄡ 憂		
an ㄢ 安	ian 一ㄢ 煙	uan ㄨㄢ 彎	üan ㄩㄢ 冤
en ㄣ 恩	in 一ㄣ 因	uen ㄨㄣ 溫	ün ㄩㄣ 暈
ang ㄤ 昂	iang 一ㄤ 央	uang ㄨㄤ 汪	
eng ㄥ 亨的韻母	ing 一ㄥ 英	ueng ㄨㄥ 翁	
ong (ㄨㄥ) 轟的韻母	iong ㄩㄥ 雍		

Note: 1. ●● 儿 ●● er, ●●●●●●●● r

2. ●● せ ●●●●●● ê

6.4 Chart of 5-strokes

代號	筆劃名稱	筆劃走向	筆劃及其變形
1	橫	左→右	一 丿
2	豎	上→下	丨 冫
3	撇	右上→左下	ノ
4	捺	左上→右下	㇇、
5	折	帶轉折	乙 冫 ㇇ ㇇ ㇇ ㇇ ㇇

The new Oxford English-Chinese Dictionary
© Oxford University Press 1989, 1993, 1997

TruVoice is a registered trademark of Lernout & Hauspie Speech Products N.V. in the U.S.A and other countries.

Copyright© 1996-1998 Lernout & Hauspie Speech Products N.V., All rights reserved.

The ULC15 voice compression software in this product is owned by and proprietary to Voxware, Inc.

.....

Contact:

Website: www.gsl.com.hk

Email: gsl@gsl.com.hk

Addresses and telephone numbers of GSL branches, please refer to the appendix of the warranty card.

Manufacturer: Group Sense Ltd.

Address: Caiwu Industrial Park, Wusha, ChangAn, Dongguan, Guangdong, People's Republic of China

Due to a huge database, mistakes are inevitable despite the great effort we have made to minimize them. We apologize for any defects. Your invaluable comments are therefore highly appreciated.

We strive for the improvement of product quality and release upgraded versions constantly, so all upgraded versions are subject to changes in their features, specification and design without further notice.